WF8804LP(A/F/G/H/S/V/W/Z)
WF8802LP(A/F/G/H/S/V/W/Z)
WF8800LP(A/F/G/H/S/V/W/Z)
WF8704LP(A/F/G/H/S/V/W/Z)
WF8702LP(A/F/G/H/S/V/W/Z)
WF8700LP(A/F/G/H/S/V/W/Z)
WF8804DP(A/F/G/H/S/V/W/Z)
WF8802DP(A/F/G/H/S/V/W/Z)
WF8800DP(A/F/G/H/S/V/W/Z)
WF8704DP(A/F/G/H/S/V/W/Z)
WF8702DP(A/F/G/H/S/V/W/Z)
WF8700DP(A/F/G/H/S/V/W/Z)
WF8804CP(A/F/G/H/S/V/W/Z)
WF8802CP(A/F/G/H/S/V/W/Z)
WF8800CP(A/F/G/H/S/V/W/Z)
WF8704CP(A/F/G/H/S/V/W/Z)
WF8702CP(A/F/G/H/S/V/W/Z)
WF8700CP(A/F/G/H/S/V/W/Z)

Washing Machine

user manual

imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register your product at

www.samsung.com/register

SAMSUNG

features of your new samsung washing machine

Your new washing machine will change the way you feel about doing laundry. From its super-size capacity to its energy efficiency, the Samsung washing machine has all the features to turn a mundane chore into a pleasure.

- **Baby Care System**

  Your Samsung washing machine includes wash programs that adds protection to the clothing of children with sensitive skin.
  These programs reduce skin irritation in children by minimizing detergent residue. In addition, these programs classify laundry into various types and the wash is performed according to the laundry characteristics so that children feel refreshingly clean whenever they put on their clothes.

- **Child Lock**

  The Child Lock function ensures that curious little hands are kept out of your washing machine.
  This safety feature stops your children from playing with the operation of the washing machine, and alerts you when it is activated.

- **Wool Certified**

  The machine has been tested and passed the required Woolmark Company specification for machine washable wool products.
  Fabrics should be washed according to the instructions on the garment label as specified by Woolmark and Samsung.

- **Delay End**

  Delay a cycle for up to 19 hours in one-hour increments and increase the convenience of using your washing machine especially when you have to go out.

- **Quick Wash**

  No time to lose! Less than 30 minutes wash will give you time to run out before it's too late. Our 29 minute Quick Wash program can be the solution to your busy life. Now you can wash your favourite clothes in only 29 minutes!

- **Delicates & Hand Wash Program**

  Special care can be determined by the appropriate temperature, the gentle wash action and the appropriate amount of water.

- **Ceramic Heater for Durability & Energy Saving (selected models)**

  Our truly innovative Ceramic Heater is twice as durable as regular heaters.
  That saves you money on repairs. Plus, it eliminates the scale of hard water and save energy.

WF8804LP-02990C_EN.indd 2 2011-5-28 16:23:20

- ## Energy Saving A+AA

  We've made the grade! Samsung's WF8804(DP/CP/LP)/WF8704(DP/CP/LP), the latest in our hightech 1400 rpm spin models, was awarded a triple A score: A+ rated energy consumption, A rated washing performance, and A rated spin dry performance. As a result, you accumulate more free time and money to spend on what really counts - you and your family.

- ## Digital Graphic Display

  The Digital Graphic Display control panel is clear and easy to use for minimum fuss and hassle. And while it is easy to operate, the Digital Graphic Display enables you to make quick and accurate adjustments to your wash for excellent washing results.

- ## Air Refresh (selected models)

  Refresh your favorite clothes simply with air after you've been out at a party or have simply been out (food, cigarettes). Non-stained clothing does not need to be washed, simply refresh it. 3 different cycles are available for various kinds of fabrics.

- ## Wide door

  Extra wide door aperture for convenient viewing! Easily add and remove laundry, especially for large sized laundry items such as bedding, towels etc.

This manual contains important information on the installation, use, and care of your new Samsung washing machine. Refer to it for descriptions of the control panel, instructions on how to use the washing machine, and tips for making the most of its state-of-the-art features and functions. The "Troubleshooting and information codes" section on page 33 tells you what to do if something goes wrong with your new washing machine.

WF8804LP-02990C_EN.indd 3 2011-5-28 16:23:20

safety information

Congratulations on your new Samsung ActivFresh™ washer. This manual contains important information on the installation, use and care of your appliance. Please take time to read this manual to take full advantage of your washer's many benefits and features.

WHAT YOU NEED TO KNOW ABOUT SAFETY INSTRUCTIONS

Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance and retain it at a safe place near the appliance for your future reference. Use this appliance only for its intended purpose as described in this instruction manual.
Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution, and care when installing, maintaining, and operating your washer.
Because these following operating instructions cover various models, the characteristics of your washer may differ slightly from those described in this manual and not all warning signs may be applicable. If you have any questions or concerns, contact your nearest service center or find help and information online at www.samsung.com.

IMPORTANT SAFETY SYMBOLS AND PRECAUTIONS

What the icons and signs in this user manual mean:

WARNING	Hazards or unsafe practices that may result in **severe personal injury, death and/or property damage.**
CAUTION	Hazards or unsafe practices that may result in **personal injury and/or property damage**.
CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your washer, follow these basic safety precautions:

	Do NOT attempt.
	Do NOT disassemble.
	Do NOT touch.
	Follow directions explicitly.
	Unplug the power plug from the wall socket.
	Make sure the machine is grounded to prevent electric shock.
	Call the service centre for help.
	Note

These warning signs are here to prevent injury to you and others.
Please follow them explicitly.
After reading this section, keep it in a safe place for future reference.

Read all instructions before using the appliance.

As with any equipment using electricity and moving parts, potential hazards exist. To safely operate this appliance, become familiar with its operation and exercise care when using it.

WF8804LP-02990C_EN.indd 4 2011-5-28 16:23:22

Do not let children (or pets) play on or in your washing machine. The washing machine door does not open easily from the inside, and children may be seriously injured if trapped inside.

WARNING This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the plug (power supply cord) is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

This appliance should be positioned to be accessible to the power plug, the water supply tabs and the drain pipes.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Use the new hose-sets and old hose-sets should not be reused.

WF8804LP-02990C_EN.indd 5 2011-5-28 16:23:22

safety information

WARNING SEVERE WARNING SIGNS FOR INSTALLATION

The installation of this appliance must be performed by a qualified technician or service company.

- Failure to do so may result in electric shock, fire, an explosion, problems with the product, or injury.

The appliance is heavy, take care upon lifting it

Plug the power cord into an AC 220V/50Hz/15A wall socket or higher and use the socket for this appliance only. In addition, do not use an extension cord.

- Sharing a wall socket with other appliances using a power strip or extending the power cord may result in electric shock or fire.
- Ensure that the power voltage, frequency and current are the same as those of the product specifications. Failure to do so may result in electric shock or fire. Failure Plug the power plug into the wall socket firmly.

Remove all foreign substances such as dust or water from the power plug terminals and contact points using a dry cloth on a regular basis.

- Unplug the power plug and clean it with a dry cloth.
- Failure to do so may result in electric shock or fire.

Plug the power plug into the wall socket in the right direction so that the cord runs towards the floor.

- If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may result in electric shock or fire.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

- If a child places a bag over its head, it may result in suffocation.

When the appliance or power plug or power cord is damaged, contact your nearest service centre.

This appliance must be properly grounded.
Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line.

- This may result in electric shock, fire, an explosion, or problems with the product
- Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national codes.

Do not install this appliance near a heater, inflammable material.
Do not install this appliance in a humid, oily or dusty location, in a location exposed to direct sunlight and water (rain drops).

Do not install this appliance in a location of low temperature
- Frost may cause tubes to burst

Do not install this appliance in a location where gas may leak.

- This may result in electric shock or fire.

Do not use an electric transformer.

- It may result in electric shock or fire.

Do not use a damaged power plug, damaged power cord or loose wall socket.

- This may result in electric shock or fire.

Do not pull or excessively bend the power cord.
Do not twist or tie the power cord.

WF8804LP-02990C_EN.indd 6 2011-5-28 16:23:22

Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance.

- This may result in electric shock or fire.

Do not pull the power cord, when unplugging the power plug.

- Unplug the power plug by holding the plug.
- Failure to do so may result in electric shock or fire.

Do not lay the power cord and tubes where you may fall over them.

CAUTION CAUTION SIGNS FOR INSTALLATION

This appliance should be positioned in such a way that it is accessible to the power plug.

- Failure to do so may result in electric shock or fire due to electric leakage.

Install your appliance on a level and hard floor that can support its weight.

- Failure to do so may result in abnormal vibrations, moves, noise, or problems with the product.

WARNING SEVERE WARNING SIGNS FOR USING

If the appliance is flooded, cut the water supply and power immediately and contact your nearest service centre.

- Do not tough the power plug with wet hands
- Failure to do so may cause electric shock

If the appliance generates a strange noise, a burning smell or smoke, unplug the power plug immediately and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.

- Do not use a ventilating fan.
- A spark may result in an explosion or fire.

Do not let children play in or on the washer. In addition, when disposing of the appliance, remove the washer door lever.

- If trapped inside, the child may become trapped and suffocate to death.

Make sure to remove the packaging (sponge, styrofoam) attached to the bottom of the washer before using it.

WF8804LP-02990C_EN.indd 7 2011-5-28 16:23:23

safety information

Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other flammable or explosive substances.

- This may result in electric shock, fire or an explosion.

Do not open the washer door by force while it is operating (high-temperature washing/ drying/spinning).

- Water flowing out of the washer may result in burns or cause the floor to be slippery.

This may result in injury.

- Opening the door by force may result in damage to the product or injury.

Do not insert your hand under the washer.

- This may result in injury.

Do not touch the power plug with wet hands.

- This may result in electric shock.

Do not turn the appliance off by unplugging the power plug while an operation is in progress.

- Plugging the power plug into the wall socket again may cause a spark and result in electric shock or fire.

Do not let children or infirm persons use this washer unsupervised. Do not let children climb in the appliance

- Failure to do so may result in electric shock, burns or injury.

Do not insert your hand or a metal object under the washer while it is operating.

- This may result in injury.

Do not unplug the appliance by pulling at the power cord, always grip plug firmly and pull straight out from the outlet.

- Damage to the cord may cause short-circuit, fire and/or electric shock

---

Do not attempt to repair, disassemble, or modify the appliance yourself.

- Do not use any fuse(such as cooper, steel wire, etc.) other than the standard fuse.
- When repairing or reinstalling the appliance is required, contact your nearest service centre.
- Failure to do so may result in electric shock, fire, problems with the product, or injury.

If any foreign substance such as water has entered the appliance, unplug the power plug and contact your nearest service centre.

- Failure to do so may result in electric shock or fire.

When the water supply hose comes loose from the faucet and floods the appliance, unplug the power plug.

- Failure to do so may result in electric shock or fire.

Unplug the power plug when the appliance is not being used for long periods of time or during a thunder/lightning storm.

- Failure to do so may result in electric shock or fire.

WF8804LP-02990C_EN.indd 8 2011-5-28 16:23:23

CAUTION SIGNS FOR USING

When the washer is contaminated by a foreign substance such as detergent, dirt, food waste, etc., unplug the power plug and clean the washer using a damp and soft cloth.

- Failure to do so may result in discoloration, deformation, damage or rust.

The front glass may be broken by a strong impact. Take care when using the washer.

- When the glass is broken, it may result in injury.

After a water supply failure or when reconnecting the water supply hose, open the faucet slowly.
Open the faucet slowly after a long period of non-use.

- The air pressure in the water supply hose or the water pipe may result in damage to a part or in water leakage.

If a drain error occurs during an operation, check if there is a draining problem.

- If the washer is used when it is flooded because of a draining problem, it may result in electric shock or fire due to electric leakage.

Insert the laundry into the washer completely so that laundry does not get caught in the door.

- If laundry gets caught in the door, it may result in damage to the laundry or the washer, or result in water leakage.

Ensure that the faucet is turned off when the washer is not being used.

- Ensure that the screw on the water supply hose connector is properly tightened.
- Failure to do so may result in property damage or injury.

Check if the rubber seal is not contaminated by foreign substances (waste, thread, etc).

- If the door is not closed completely, it may result in water leakage.

Open the faucet and check if the water supply hose connector is firmly tightened and that there is no water leaking before using the product.

- If the screws or the water supply hose connector are loose, it may result in water leakage.

To reduce the risk of fire or explosion:

- Under certain conditions, hydrogen gas may be produced in a hot water system such as your hot water heater that has not been used for two weeks or more. HYDROGEN GAS IS EXPLOSIVE. If your hot water system has not been used for two weeks or more, turn on all hot water taps in your home, and let the water flow for several minutes before using your washing machine. This will release any hydrogen gas build–up. Since hydrogen gas is flammable, do not smoke or light an open flame during this time. Ventilate immediately without touching the power plug if there is a gas leak.

WF8804LP-02990C_EN.indd 9 2011-5-28 16:23:23

Do not stand on top of the appliance or place objects (such as laundry, lighted candles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the appliance.
- This may result in electric shock, fire, problems with the product, or injury.

Do not spray volatile material such as insecticide onto the surface of the appliance.
- As well as being harmful to humans, it may also result in electric shock, fire or problems with the product.

Do not place an object that generates a electromagnetic field near the washer.
- This may result in injury due to a malfunction.

Since the water drained during a high-temperature wash or drying cycle is hot, do not touch the water.
- This may result in burns or injury.

Do not wash, spin or dry water-proof seats, mats or clothing (*) unless your appliance has a special program for washing these items.
- Do not wash thick, hard mats even if the washer mark is on the care label.
- This may result in injury or damage to the washer, walls, floor or clothing due to abnormal vibrations.

* Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags, diaper covers, sweat suits, and bicycle, motor cycle, car covers, etc.

Do not operate the washer when the detergent box is removed.
- This may result in electric shock or injury due to water leakage.

Do not touch the inside of the tub during or just after drying as it is hot.
- This may result in burns.

Do not insert your hand into the detergent box after opening it.
- This may result in injury as your hand may be caught by the detergent input device.Do not place any objects (such as shoes, food waste, animals) other than laundry into the washer.
- This may result in damage to the washer, or injury and death in the case of pets due to the abnormal vibrations.

Do not press the buttons using sharp objects such as pins, knifes, fingernails, etc.
- This may result in electric shock or injury.

Do not wash laundry contaminated by oils, creams or lotions usually found in skincare shops or massage clinics.
- This may result in the rubber seal becoming deformed and water leakage.

Do not leave metal objects such as a safety pin or hair pin, or bleach in the tub for long periods of time.
- This may cause the tub to rust.
- If rust starts appearing on the surface of the tub, apply a cleansing agent (neutral) to the surface and use a sponge to clean it. Never use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.
- This may result in spontaneous combustion or ignition due to the heat of the oxidation of the oil.

Do not use hot water from water cooling/heating devices.
- This may result in problems with the washer.

WF8804LP-02990C_EN.indd 10 2011-5-28 16:23:23

Do not use natural hand-washing soap for the washer.
- If it hardens and accumulates inside the washer, it may result in problems with the product, discoloration, rust or bad odors.

Do not wash large laundry items such as bedding in the washing net.
- Place socks and brassieres into the washing net and wash them with the other laundry.
- Failure to do so may result in injury due to abnormal vibrations.

Do not use hardened detergent.
- If it accumulates inside the washer, it may result in water leakage.

For washing machines with ventilation openings in the base, ensure that the opening is not obstructed by carpet or any other obstacles.

Make sure that the pockets of all clothing to be washed are empty.
- Hard, sharp objects, such as coins, safety pins, nails, screws, or stones can cause extensive damage to the appliance.

Do not wash clothing with large buckles, buttons, or other heavy metal.

WARNING SEVERE WARNING SIGNS FOR CLEANING

Do not clean the appliance by spraying water directly onto it.
Do not use benzene, thinner or alcohol to clean the appliance.
- This may result in discoloration, deformation, damage, electric shock or fire.

Before cleaning or performing maintenance, unplug the appliance from the wall socket.
- Failure to do so may result in electric shock or fire.

WF8804LP-02990C_EN.indd 11 2011-5-28 16:23:23

contents

SETTING UP YOUR WASHING MACHINE 13

13 Checking the parts
14 Meeting installation requirements
14 Electrical supply and grounding
14 Water Supply
15 Drain
15 Flooring
15 Surrounding temperature
15 Alcove or closet installation
15 Installing your washing machine

WASHING A LOAD OF LAUNDRY 21

21 Washing for the first time
21 Basic instructions
22 Using the control panel
24 Child lock
24 Sound off
24 Delay end
25 Washing clothes using the cycle selector
26 Washing clothes manually
26 Laundry guidelines
28 Detergent and additives information
28 Which detergent to use
28 Detergent drawer

CLEANING AND MAINTAINING YOUR WASHING MACHINE 29

29 Draining the washing machine in an emergency
29 Cleaning the exterior
30 Cleaning the detergent drawer and drawer recess
31 Cleaning the debris filter
32 Cleaning the water hose mesh filter
32 Repairing a frozen washing machine
32 Storing your washing machine

TROUBLESHOOTING AND INFORMATION CODES 33

33 Check these points if your washing machine...
34 Information codes

CYCLE CHART 35

35 Cycle chart

APPENDIX 36

36 Fabric care chart
36 Protecting the environment
36 Declaration of conformity
37 Specifications

WF8804LP-02990C_EN.indd 12 2011-5-28 16:23:23

setting up your washing machine

Be sure to have your installer follow these instructions closely so that your new washing machine works properly and so that you're not at risk of injury when doing laundry.

CHECKING THE PARTS

Carefully unpack your washing machine, and make sure you've received all of the parts shown below. If your washing machine was damaged during shipping, or if you do not have all of the parts, contact Samsung Customer Service or your Samsung dealer.

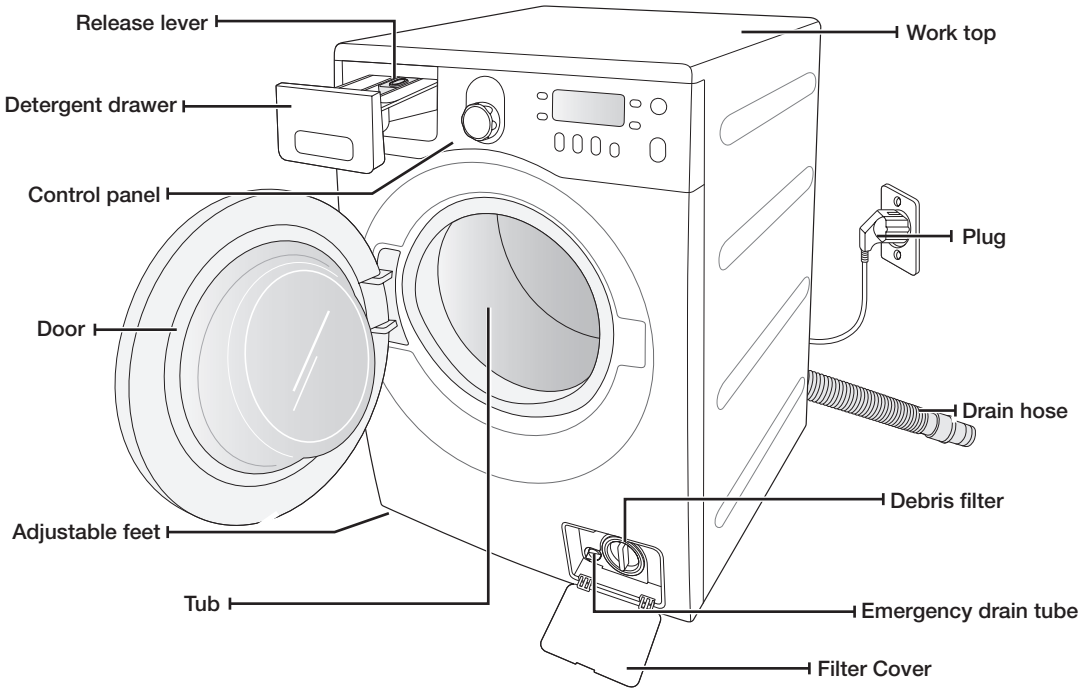

Spanner | * Bolt hole covers | Water supply hose | Hose guide

*** Bolt hole covers** : The number of bolt hole covers depends on the model (3~5 covers).

WF8804LP-02990C_EN.indd 13 2011-5-28 16:23:25

setting up your washing machine

MEETING INSTALLATION REQUIREMENTS

Electrical supply and grounding

To prevent unnecessary risk of fire, electrical shock, or personal injury, all wiring and grounding must be done in accordance with the National Electrical Code ANSI/FNPA, No. 70 Latest Revision and local codes and ordinances. It is the personal responsibility of the appliance owner to provide adequate electrical service for this appliance.

WARNING Never use an extension cord.
Use only the power cord that comes with your washing machine.

When preparing for installation, ensure that your power supply offers:
- AC 220-240V / 50Hz fuse or circuit breaker
- Individual branch circuit serving only your washing machine

Your washing machine must be grounded. If your washing machine malfunctions or breaks down, grounding will reduce the risk of electric shock by providing a path of least resistance for the electric current.
Your washing machine comes with a power cord having a three-prong grounding plug for use in a properly installed and grounded outlet.

Never connect the ground wire to plastic plumbing lines, gas lines, or hot water pipes.

Improperly connecting the equipment-grounding conductor can result electrical shock.
Check with a qualified electrician or serviceman if you are unsure if the washing machine is properly grounded. Do not modify the plug provided with the washing machine. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Water Supply

Your washing machine will fill properly when your water pressure is 50 kPa ~ 800 kPa. Water pressure less than 50 kPa may cause water valve failure, not allowing the water valve to shut off completely. Or, it may take the washing machine longer to fill than what the controls allow, resulting in your washing machine turning off. (A fill-time limit, designed to prevent overflows/ flooding if an internal hose becomes loose, is built into the controls.)

The water taps must be within 4 feet (122cm) of the back of your washing machine for the provided inlet hoses provided to reach your washing machine.

Most plumbing supply stores sell inlet hoses of various lengths up to 10 feet (305cm) long.

You can reduce the risk of leaks and water damage by:
- Making water taps easily accessible.
- Turning off taps when the washing machine is not in use.
- Periodically checking for leaks at water inlet hose fittings.

WARNING Before using your washing machine for the first time, check all connections at the water valve and taps for leaks.

WF8804LP-02990C_EN.indd 14 2011-5-28 16:23:25

Drain

Samsung recommends a standpipe height of 65 cm. The drain hose must be routed through the drain hose clip to the standpipe. The standpipe must be large enough to accept the outside diameter of the drain hose. The drain hose is attached at the factory.

Flooring

For best performance, your washing machine must be installed on a solidly constructed floor. Wood floors may need to be reinforced to minimize vibration and/or unbalanced loads. Carpeting and soft tile surfaces are contributing factors to vibrations and the tendency for your washing machine to move slightly during the spin cycle.

Never install your washing machine on a platform or poorly supported structure.

Surrounding temperature

Do not install your washing machine in areas where water may freeze, since your washing machine always retains some water in its water valve, pump, and hose areas. Frozen water in the lines can cause damage to belts, the pump, and other components.

Alcove or closet installation

To operate safely and properly, your new washing machine requires minimum clearances of:

Sides – 25 mm	Rear – 51 mm
Top – 25 mm	Front – 465 mm

If both the washing machine and a dryer are installed together, the front of the alcove or closet must have at least 465 mm unobstructed air opening. Your washing machine alone does not require a specific air opening.

INSTALLING YOUR WASHING MACHINE

STEP 1
Selecting a location

Before you install the washing machine, make sure the location:

- Has a hard, level surface without carpeting or flooring that may obstruct ventilation
- Is away from direct sunlight
- Has adequate ventilation
- Will not be freezing (below 32 ˚F or 0 ˚C)
- Is away from heat sources such as oil or gas
- Has enough space so that the washing machine doesn't stand on its power cord

WF8804LP-02990C_EN.indd 15 2011-5-28 16:23:25

setting up your washing machine

STEP 2
Removing the shipping bolts

Before installing the washing machine, you must remove all shipping bolts from the back of the unit.

1. Loosen all the bolts with the supplied wrench.

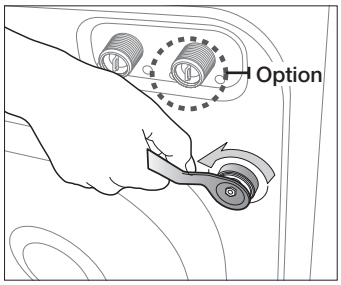

2. Hold the bolt with the spanner and pull it through the wide section of the hole. Repeat for each bolt.

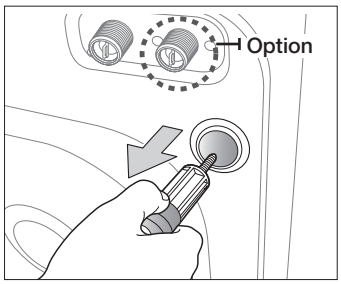

3. Fill the holes with the supplied plastic covers.

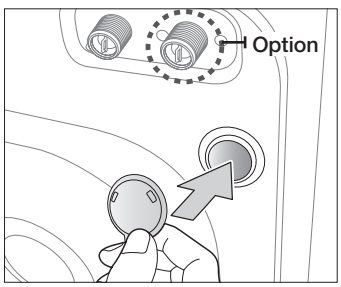

4. Store the shipping bolts away safely in case you have to move the washing machine in the future.

WARNING Packaging materials can be dangerous to children; keep all packaging material (plastic bags, polystyrene, etc.) well out of the reach of children.

WF8804LP-02990C_EN.indd 16 2011-5-28 16:23:26

STEP 3
Adjusting the levelling feet

When installing your washing machine, ensure that the power plug, the water supply and the drain are easily accessible.

1. Slide the washing machine into position.
2. Level your washing machine by turning the leveling feet in and out as necessary by hand.

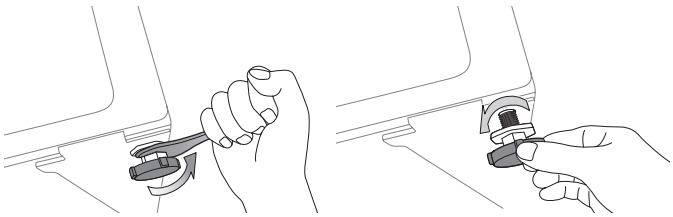

3. When your washing machine is level, tighten the nuts using the wrench supplied with your washing machine.

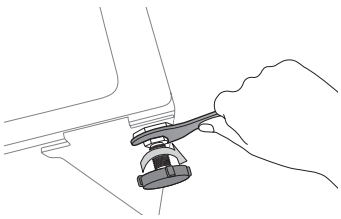

STEP 4
Connecting the water and drain

Connecting the water supply hose

1. Take the L-shaped arm fitting for the cold water supply hose and connect it to the cold water supply intake on the back of the machine. Tighten by hand.

The water supply hose must be connected to the washing machine at one end and to the water tap at the other. Do not stretch the water supply hose. If the hose is too short, replace the hose with a longer, high pressure hose.

2. Connect the other end of the cold water supply hose to your sink's cold water tap and tighten it by hand. If necessary, you can reposition the water supply hose at the washing machine end by loosening the fitting, rotating the hose, and retightening the fitting.

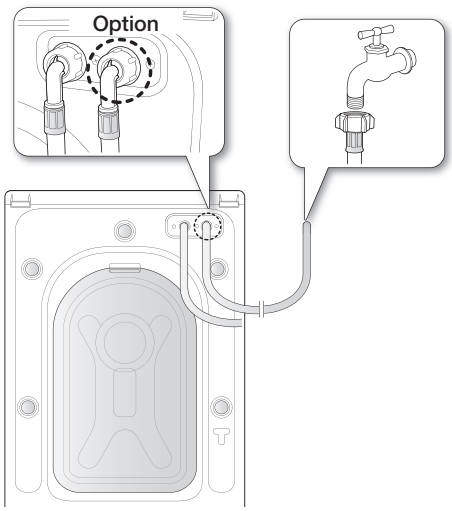

For selected models with an additional hot water intake:

1. Take the red L-shaped arm fitting for the hot water supply hose and connect it to the hot water supply intake on the back of the machine. Tighten by hand.
2. Connect the other end of the hot water supply hose to your sink's hot water tap and tighten it by hand.
3. Use a Y-piece if you only want to use cold water.

WF8804LP-02990C_EN.indd 17 2011-5-28 16:23:27

setting up your washing machine

Connecting the water supply hose (selected models)

1. Remove the adaptor from the water supply hose.

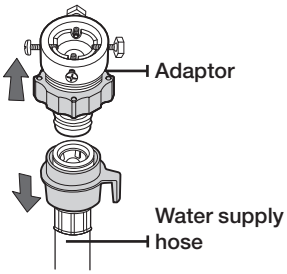

2. First, using a '+' type screwdriver, loosen the four screws on the adaptor. Next, take the adaptor and turn part (2) following the arrow until there is a 5 mm gap.

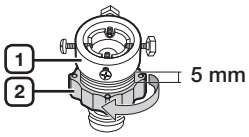

3. Connect the adaptor to the water tap by tightening the screws firmly while lifting the adaptor upwards. Turn part (2) following the arrow and connect (1) and (2).

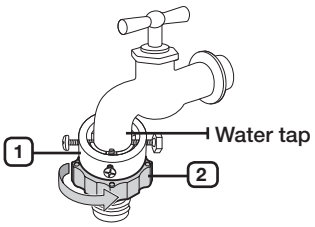

4. Connect the water supply hose to the adaptor. When you release part (3), the hose automatically connects to the adaptor making a 'click' sound.

After you have connected the water supply hose to the adaptor, ensure that it is connected correctly by pulling the water supply hose downwards.

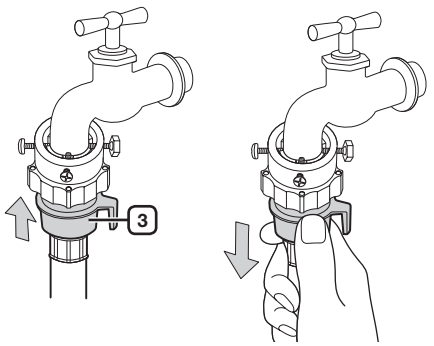

5. Connect the other end of the water supply hose to the inlet water valve at the rear of the washing machine. Screw the hose clockwise all the way in.

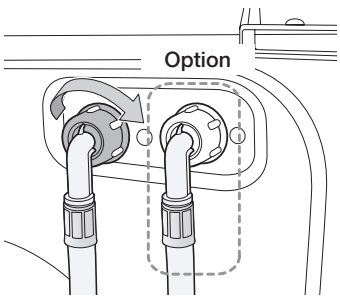

WF8804LP-02990C_EN.indd 18 2011-5-28 16:23:28

6. Turn on the water supply and ensure that no water leaks from the water valve, tap or adaptor. If there is a water leaks, repeat the previous steps.

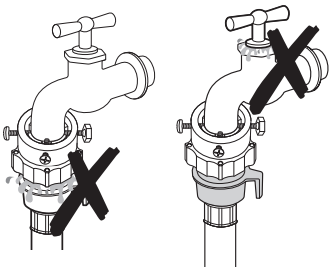

WARNING Do not use your washing machine if there is a water leak. This may cause electric shock or injury.

- If the water tap has a screw type tap, connect the water supply hose to the tap as shown.

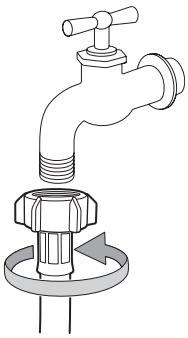

Use the most conventional type of tap for the water supply. In case the tap is square or too big, remove the spacing ring before inserting the tap into the adaptor.

Connecting the Aqua Hose (Selected models)

The Aqua Hose was invented for perfect leakage protection. It is attached to the water supply hose and automatically cuts off the water flow if the hose is damaged. It also displays a warning indicator.

- Connect the water supply hose to the tap as shown.

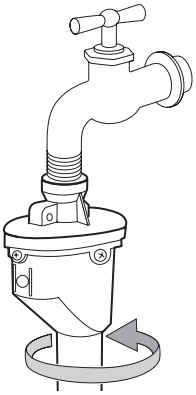

WF8804LP-02990C_EN.indd 19 2011-5-28 16:23:29

setting up your washing machine

Connecting the drain hose

The end of the drain hose can be positioned in three ways:

1. Over the edge of a wash basin: The drain hose must be placed at a height of between 60 and 90 cm. To keep the drain hose spout bent, use the supplied plastic hose guide. Secure the guide to the wall with a hook or to the tap with a piece of string to prevent the drain hose from moving.

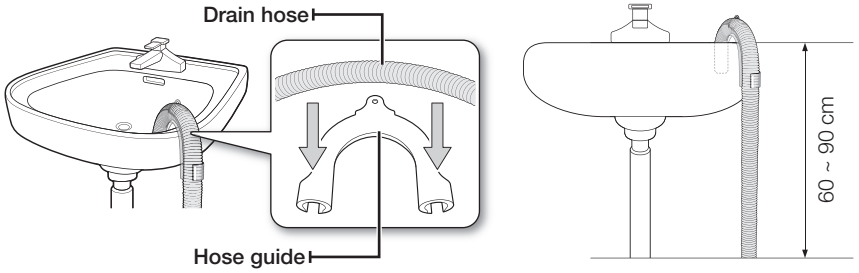

2. In a sink drain pipe branch: The drain pipe branch must be above the sink siphon so that the end of the hose is at least 60 cm above the ground.
3. In a drain pipe: We recommend using a 65 cm high vertical pipe; it must be no shorter than 60 cm and no longer than 90 cm.

The standpipe drain requires;

- minimum diameter 5 cm.
- minimum carry-away capacity 60 liter per minute.

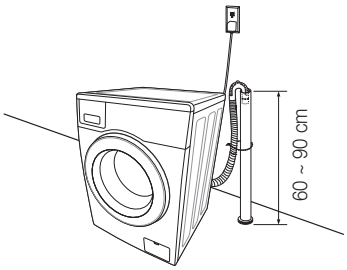

STEP 5

Powering your washing machine

Plug the power cord into a wall sockets, an AC 220-240V / 50Hz approved electrical outlet protected by a fuse or circuit breaker. (For more information on electrical and grounding requirements, see page 14.)

WF8804LP-02990C_EN.indd 20 2011-5-28 16:23:31

washing a load of laundry

With your new Samsung washing machine, the hardest part of doing laundry will be deciding which load to wash first.

WASHING FOR THE FIRST TIME

Before washing laundry for the first time, you must run a complete empty cycle (i.e. no laundry).

1. Press the **Power** button.
2. Add a little detergent to the detergent compartment Ⅱ in the detergent drawer.
3. Turn on the water supply to the washing machine.
4. Press the **Start/Pause** button.

This will remove any water that might be left over in the machine from the manufacturer's test run.

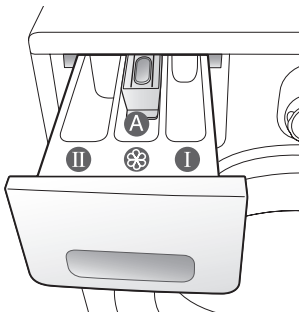

Compartment Ⅰ: Detergent for prewash, or starch.
Compartment Ⅱ: Detergent for the main wash, water softener, pre-soaking agent, bleach and stain removal product.
Compartment ❀: Additives, e.g. fabric softener or former (fill no higher than lower edge (MAX) of "A")

BASIC INSTRUCTIONS

1. Load your laundry into the washing machine.

WARNING Do not overload the washing machine. To determine the load capacity for each type of laundry, refer to the chart on page 27.

- Make sure that laundry is not caught in the door, as this may cause a water leak.
- Washing detergent may remain in the front rubber part of the washer after a wash cycle. Remove any remaining detergent, as they may cause a water leak.
- Do not wash water-proofed items.

2. Close the door until it latches.
3. Turn the power on.
4. Add detergent and additives to the dispenser drawer.
5. Select the appropriate cycle and options for the load.
   The Wash Indicator light will illuminate and the estimated cycle time will appear in the display.
6. Press the **Start/Pause** button.

WF8804LP-02990C_EN.indd 21 2011-5-28 16:23:32

washing a load of laundry

USING THE CONTROL PANEL

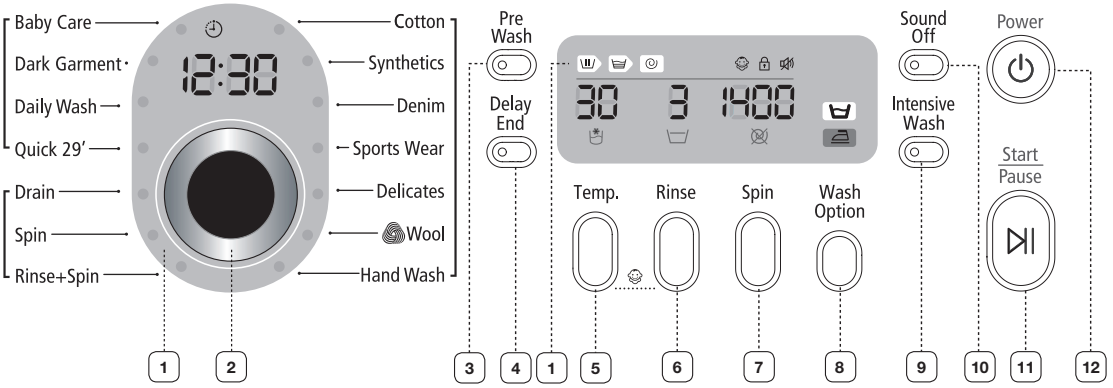

1 **DIGITAL GRAPHIC DISPLAY**	Displays the remaining wash cycle time, all cycle information, and error messages.
2 **CYCLE SELECTOR**	Select the tumble pattern and spin speed for the cycle. For detailed information, refer to "Washing clothes using the cycle selector". **Cotton** - For averagely or lightly soiled cotton, bed linen, table linen, underwear, towels, shirts, etc. **Synthetics** - For averagely or lightly soiled blouses, shirts, etc., made of polyester (diolen, trevira), polyamide (perlon, nylon) or other similar blends. **Denim** - A higher water level in the main wash and extra rinse ensure that no washing powder remains that may mark your clothing. **Sports Wear** - Use for water-proofed or proofed garments to keep their good looks and fresh feel. **Delicates** - For sheer fabrics, brassieres, lingerie, dresses, shirts and blouses. For best results, use liquid detergent. **Wool** - Only for machine-washable wool. A load should be less than 2.0 kg. The wool wash cycle of this machine has been approved by Woolmark for the washing of machine-washable Woolmark products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine, M0815 for WF87*****, M0814 for WF88***** (Certificate Number issued by IWS NOM INEE Co., Ltd.) **Handwash** - A very light wash cycle as gentle as a hand wash. **Baby Care** - High temperature wash and extra rinses ensure that no washing powder remains to mark your thin clothes. **Dark Garment** - Additional rinses and reduced spinning ensure that your favourite dark clothes are washed gently and rinsed thoroughly. **Daily Wash** - Use for everyday items such as underwear and shirts. **Quick 29'** - For lightly soiled garments that you require quickly. **Drain** - Just drain the water from washing machine without spinning. **Spin** - Performs an additional spin cycle to remove more water. **Rinse + Spin** - Use for a load that needs rinsing only or to add rinse-added fabric softener to a load.

WF8804LP-02990C_EN.indd 22 2011-5-28 16:23:33

3 **PREWASH SELECTION BUTTON**	Press this button to select pre-wash. Pre-wash is only available with: Cotton, Synthetics, Denim, Sports Wear, Baby Care, Dark Garment, Daily Wash.
4 **DELAY END SELECTION BUTTON**	Press this button repeatedly to cycle through the available Delay End options (from 3 hours to 19 hours in one hour increments). The hour displayed indicates the time when the wash cycle will be finished.
5 **TEMPERATURE SELECTION BUTTON**	Press this button repeatedly to cycle through the available water temperature options: (Cold Water, 30 ˚C, 40 ˚C , 60 ˚C and 95 ˚C).
6 **RINSE SELECTION BUTTON**	Press this button to add additional rinse cycles. The maximum number of rinse cycles is five.
7 **SPIN SELECTION BUTTON**	Press the button repeatedly to cycle through the available speeds for the spin cycle. WF8804 / WF8704 — , , 400, 800, 1200, 1400 rpm WF8802 / WF8702 — , , 400, 800, 1000, 1200 rpm WF8800 / WF8700 — , , 400, 600, 800, 1000 rpm "No spin " - The laundry remains in the drum and no spin cycle is performed after the final drain. "Rinse Hold " -The laundry remains soaking in the final rinse water. Before the laundry can be unloaded, either a Drain or Spin cycle must be performed.
8 **WASH OPTION SELECTION BUTTON**	Press this button repeatedly to cycle through the wash options: Easy Iron → Soak → Easy Iron + Soak → off "Easy Iron ": Use this option to prepare your laundry so that it can be easily ironed. "Soak ": Use this option to effectively remove stains from your laundry by soaking your laundry. • The Soak function is performed 13 minutes into the wash cycle. • The Soak function continues for 30 minutes with six cycles, where one cycle is a soak cycle that spins for 1 minute and stands still for 4 minutes. • The Soak function is only available for the following wash programs: Cotton, Synthetics, Denim, Sports Wear, Baby Care, Dark Garment, Daily Wash.
9 **INTENSIVE WASH SELECTION BUTTON**	Press this button when the laundry is heavily soiled and needs to be washed intensively. The cycle time is increased for each cycle.
10 **SOUND OFF BUTTON**	The sound can be turned off for all courses. When this function is selected, the sound is turned off for all cycles. • When the Sound off function is activated, the lamp on the **Sound Off** button and the control panel are illuminated. • When the Sound off function is deactivated, a buzzer will go off, and the lamp on the button and the control panel is turned off.
11 **START/PAUSE SELECTION BUTTON**	Press to pause and restart a cycle.
12 **POWER BUTTON**	Press it once to turn your washing machine on, press it again to turn your washing machine off. If the washing machine is left on for more than 10 minutes without any buttons being touched, the power automatically turns off.

WF8804LP-02990C_EN.indd 23 2011-5-28 16:23:34

washing a load of laundry

Child lock

The Child Lock function allows you to lock the buttons so that the wash cycle you've chosen can't be changed.

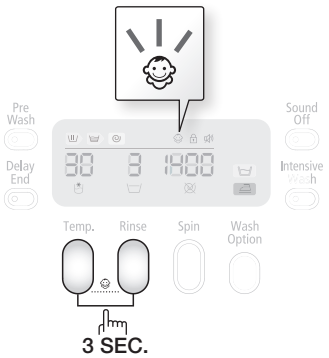

Activating/Deactivating

If you want to activate or deactivate the Child Lock function, press the **Temp.** and **Rinse** buttons at the same time for 3 seconds. "Child Lock" will be lit when this feature is activated.

When the Child Lock function is activated, only the **Power** button works. The Child Lock function remains on even after the power is turned on and off or after the disconnecting and reconnecting the power cord.

Sound off

The Sound Off function can be selected during all courses. When this function is selected, sound is turned off for all courses. Even if the power is turned on and off repeatedly, the setting is retained.

Activating/Deactivating

If you want to activate or deactivate the **Sound Off** function, press the Sound OFF button. The lamp on the **Sound Off** button and the control panel will be lit when this feature is activated.

Delay end

You can set the washing machine to finish your wash automatically at a later time, choosing a delay of between 3 to 19 hours (in 1 hour increments). The hour displayed indicates the time at which the wash will be finished.

1. Manually or automatically set your washing machine according to the type of laundry you are washing.
2. Press the **Delay End** button repeatedly until the delay time is set.
3. Press the **Start/Pause** button. The "Delay End" indicator will be lit, and the clock will begin counting down until it reaches the set time.
4. To cancel a Delay End function, press the **Power** button and then turn the washing machine on again.

WF8804LP-02990C_EN.indd 24 2011-5-28 16:23:36

Washing clothes using the cycle selector

Your new washing machine makes washing clothes easy, using Samsung's "Fuzzy Control" automatic control system. When you select a wash program, the machine will set the correct temperature, washing time, and washing speed.

1. Turn on your sink's water tap.
2. Press the **Power** button.
3. Open the door.
4. Load the articles one at a time loosely into the drum, without overfilling it.
5. Close the door.
6. Add detergent, softener, and pre-wash detergent (if necessary) into the appropriate compartments.

Pre-wash is only available when selecting the Cotton, Synthetics, Denim, Sports Wear, Baby Care, Dark Garment and Daily Wash cycles. It is only necessary if your clothing is heavily soiled.

7. Use the **Cycle Selector** to select the appropriate cycle according to the type of material: Cotton, Synthetics, Denim, Sports Wear, Delicates, Wool, Hand Wash, Baby Care, Dark Garment, Daily Wash, Quick 29'. The relevant indicators will illuminate on the control panel.
8. At this time, you can control the wash temperature, the amount of rinses, the spinning speed, and the delay time by pressing the appropriate option button.
9. Press the **Start/Pause** button and the wash will begin. The process indicator will light up and the remaining time for the cycle will appear in the display.

Pause Option

Within 5 minutes of starting a wash, it is possible to add/remove laundry items.

1. Press the **Start/Pause** button to unlock the door.

The door cannot be opened when the water is too HOT or the water level is too HIGH.

2. After closing the door, press the **Start/Pause** button to restart the wash.

When the cycle is finished:

After the total cycle has finished, the power will turn off automatically.

1. Open the door.
2. Remove laundry.

WF8804LP-02990C_EN.indd 25 2011-5-28 16:23:36

Washing clothes manually

You can wash clothes manually without using the Cycle Selector.

1. Turn the water supply on.
2. Press the **Power** button on the washing machine.
3. Open the door.
4. Load the articles loosely into the drum one at a time, without overfilling it.
5. Close the door.
6. Add detergent and, if necessary, softener or prewash detergent, into the appropriate compartments.
7. Press the **Temp.** button to select the temperature. (Cold water, 30 ˚C, 40 ˚C, 60 ˚C, 95 ˚C)
8. Press the **Rinse** button to select the required number of rinse cycles.
   The maximum number of rinse cycles is five.
   The wash duration is increased accordingly.
9. Press the **Spin** button to select the spin speed.
   The rinse hold function allows you to remove items that are still wet from the washing machine. (⊗ : No Spin, ⎵ : Rinse Hold)
10. Press the **Delay End** button repeatedly to cycle through the available Delay End options (from 3 hour to 19 hours in one hour increments). The hour displayed indicates the time at which the wash will be finished.
11. Press the **Start/Pause** button and the machine will begin the cycle.

LAUNDRY GUIDELINES

Follow these simple guidelines for the cleanest laundry and the most efficient wash.

Always check the Care label on clothing before washing.

Sort and wash your laundry according to the following criteria:

- Care Label: Sort laundry into cotton, mixed fibres, synthetics, silks, wool and rayons.
- Colour: Divide whites and colours. Wash new colour items separately.
- Size: Placing items of different sizes in the same load will improve the wash action.
- Sensitivity: Wash delicate items separately, using the Delicate wash cycle for pure, new woollen items, curtains and silk articles. Check the labels on the items you are washing or refer to the fabric care chart in the appendix.

Emptying pockets

Before each wash, empty all the pockets of your laundry. Small, irregularly shaped hard objects, such as coins, knives, pins, and paperclips could damage your washing machine. Do not wash clothing with large buckles, buttons, or other heavy metal objects.

Metal on clothing may damage your clothing as well as the tub. Turn clothing with buttons and embroidered clothes inside out before washing them. If zips of pants and jackets are open while washing, the spin basket may be damaged. Zips should be closed and fixed with a string before washing.

Clothing with long strings may become entangled with other clothes damaging them. Be sure to fix the strings before starting the wash.

WF8804LP-02990C_EN.indd 26 2011-5-28 16:23:37

Prewashing cotton

Your new washing machine, combined with modern detergents, will give perfect washing results, thus saving energy, time, water and detergent. However, if your cotton is particularly dirty, prewash with a protein-based detergent.

Determining the load capacity

Do not overload the washing machine or your laundry may not wash properly. Use the chart below to determine the load capacity for the type of laundry you are washing.

Fabric Type	Load Capacity	
Model	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700
Cotton - average/lightly soiled - heavily soiled	8.0 kg	7.0 kg
Synthetics	3.0 kg	3.0 kg
Denim	3.0 kg	3.0 kg
Sports Wear	2.5 kg	2.5 kg
Delicates	2.5 kg	2.5 kg
Wool	2.0 kg	2.0 kg

- When the laundry is unbalanced ("UE" lights up on the display), redistribute the load. If the laundry is unbalanced, the spin efficiency may be degraded.
- When washing Bedding or Duvets, the wash time may be lengthened or the spin efficiency may be degraded.
- For Bedding or Duvets, the recommended load capacity is 1.8 kg or less.

Make sure to insert brassieres (water washable) into a laundry net (to be purchased additionally).

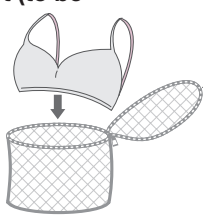

- The metal parts of the brassieres may break through the material and damage the laundry. Therefore make sure to place them inside a fine laundry net.
- Small, light clothing such as socks, gloves, stockings and handkerchiefs may become caught around the door. Place them inside a fine laundry net.

CAUTION Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and cause an accident resulting in injury.

WF8804LP-02990C_EN.indd 27 2011-5-28 16:23:37

DETERGENT AND ADDITIVES INFORMATION

Which detergent to use

The type of detergent you should use is based on the type of fabric (cotton, synthetic, delicate items, wool), colour, wash temperature, and degree of soiling. Always use “low suds” laundry detergent, which is designed for automatic washing machines.
Follow the detergent manufacturer’s recommendations based on the weight of the laundry, the degree of soiling, and the hardness of the water in your area. If you do not know how hard your water is, enquire at your local water authority.

Do not use detergent that has hardended or solidified as the detergent may remain in the rinse cycle. It may cause your washing machine to not rinse properly or result in the overflow becoming blocked.

Please note the following when using the Wool course.

- Use a neutral liquid detergent for wool only.
- When using a powder detergent, it may remain on the laundry and cause damage to the material (wool).

Detergent drawer

Your washing machine has separate compartments for dispensing detergent and fabric softener. Add all laundry additives to the correct compartment before starting your washing machine.

Do NOT open the detergent drawer when your washing machine is running.

1. Pull out the detergent drawer on the left side of the control panel.
2. Add the recommended amount of laundry detergent directly into the detergent compartment Ⅱ before starting your washing machine.
3. Add the recommended amount of fabric softener into the softener compartment ❀ if required.

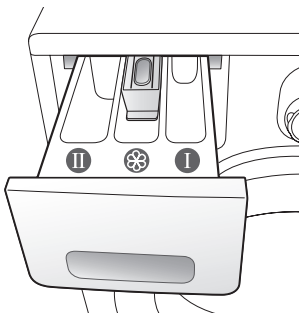

CAUTION Do NOT add any powder/liquid **detergent** to the softener compartment (❀).

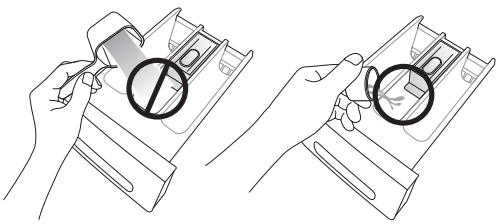

4. When using the Prewash option, add the recommended amount of laundry detergent into the prewash compartment Ⅰ.

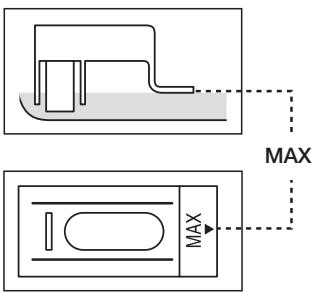

When washing large items do NOT use the following detergetnt types.

- Tablet and capsule type detergents
- Detergents using a ball and net

Concentrated or thick fabric softener and conditioner must be diluted with a little water before being poured into the dispenser (prevents the overflow from becoming blocked).

Be careful that the fabric softener does not overflow, when you close the detergent drawer after adding fabric softener into the rinse detergent compartment.

WF8804LP-02990C_EN.indd 28 2011-5-28 16:23:38

cleaning and maintaining your washing machine

Keeping your washing machine clean improves its performance, wards off unnecessary repairs, and lengthens its life.

DRAINING THE WASHING MACHINE IN AN EMERGENCY

1. Unplug the washing machine from the power supply.
2. Open the filter cover using a coin or a key.

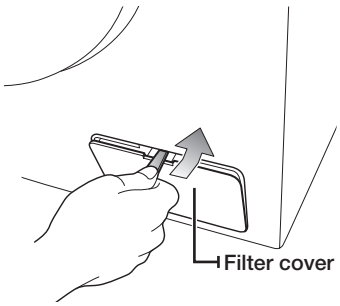

3. Unscrew the emergency drain cap by turning it to the left.

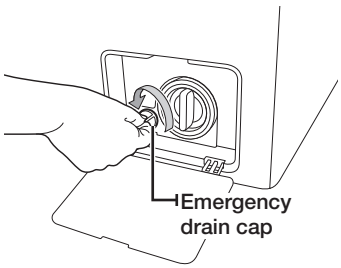

4. Hold the cap on the end of the emergency drain tube and slowly pull it out about 15 cm.
5. Allow all the water to flow into a bowl.

Remain water maybe more than you expected. Prepare larger bowl.

6. Reinsert the drain tube and screw the cap back on.
7. Replace the filter-cover.

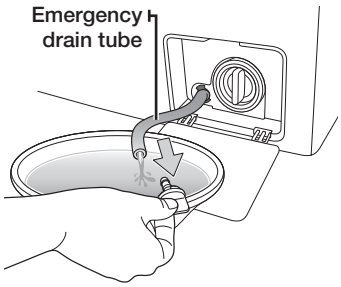

CLEANING THE EXTERIOR

1. Wipe the washing machine surfaces, including the control panel, with a soft cloth using a nonabrasive household detergent.
2. Use a soft cloth to dry the surfaces.
3. Do not pour water onto the washing machine.

WF8804LP-02990C_EN.indd 29 2011-5-28 16:23:39

cleaning and maintaining your washing machine

CLEANING THE DETERGENT DRAWER AND DRAWER RECESS

1. Press the release lever on the inside of the detergent drawer and pull the drawer out.
2. Remove the liquid detergent divider from the detergent drawer

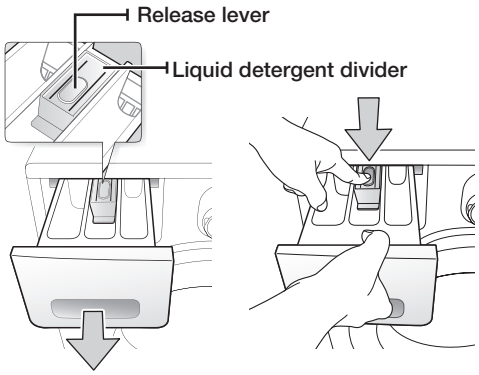

3. Wash all parts under running water.

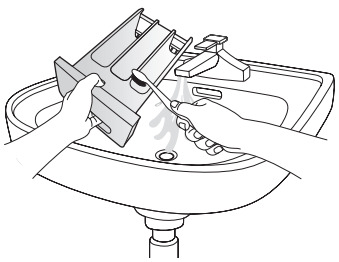

4. Clean the drawer recess with an old toothbrush.
5. Replace the liquid detergent divider by pushing it firmly into the drawer.
6. Push the drawer back into place.
7. To remove any remaining detergent, perform a rinse cycle without any laundry in the drum.

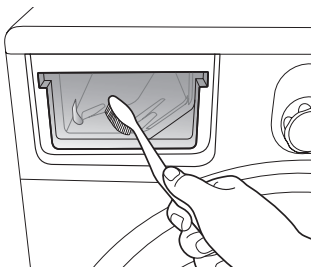

WF8804LP-02990C_EN.indd 30 2011-5-28 16:23:40

CLEANING THE DEBRIS FILTER

We recommend cleaning the debris filter 5 or 6 times a year, or when the error message of "5E" is displayed. (Refer to "Draining the washing machine in an emergency" in the previous page.)

CAUTION Before cleaning the debris filter, make sure to unplug the power cord.

1. Remove the remaining water first (refer to "Draining the washing machine in an emergency" on page 29.)

   If you separate the filter without draining the remaining water, the remaining water may trickle out.
2. Open the filter cover by using a key or coin.
3. Unscrew the emergency drain cap by turning it to the left and drain off all the water.
4. Unscrew the debris filter cap.

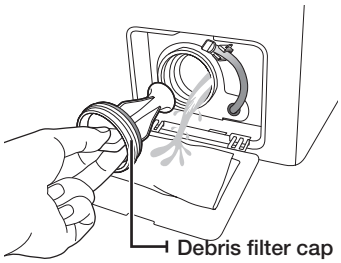

5. Wash any dirt or other material from the debris filter. Make sure the drain pump propeller behind the debris filter is not blocked.
6. Replace the debris filter cap.
7. Replace the filter cover.

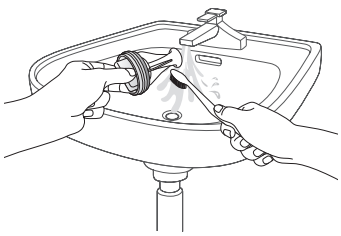

CAUTION Do not open the debris filter cap while the machine is running or hot water may flow out.

- Make sure to replace the filter cap after the filter cleaning. If the filter is out of the machine, your washing machine may malfunction or leak water.
- The filter should be fully assembled after the filter cleaning.

WF8804LP-02990C_EN.indd 31 2011-5-28 16:23:40

cleaning and maintaining your washing machine

CLEANING THE WATER HOSE MESH FILTER

You should clean the water hose mesh filter at least once a year, or when the error message of “4E” is displayed:

1. Turn off the water supply to the washing machine.
2. Unscrew the hose from the back of the washing machine. To prevent water from gushing out due to the air pressure in the hose, cover the hose with a cloth.
3. Gently pull out the mesh filter from the end of the hose using a pair of pliers and rinse it under water until clean. Also clean inside and outside the threaded connector.
4. Push the filter back into place.
5. Screw the hose back onto the washing machine.
6. Make sure the connections are watertight and turn on the tap.

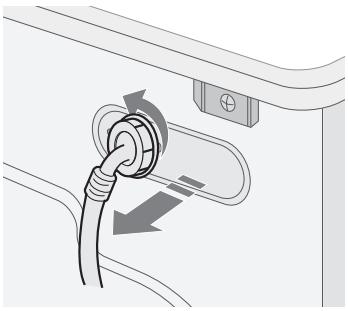

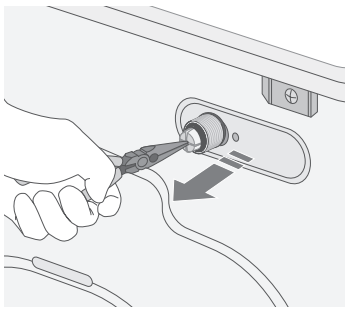

REPAIRING A FROZEN WASHING MACHINE

If the temperature drops below freezing and your washing machine is frozen:

1. Unplug the washing machine.
2. Pour warm water over the tap to loosen the water supply hose.
3. Remove the water supply hose and soak it in warm water.
4. Pour warm water into the washing machine drum and let it sit for 10 minutes.
5. Reconnect the water supply hose to the water tap and check if the water supply and drain are operating normal.

STORING YOUR WASHING MACHINE

If you need to store your washing machine for an extended time, it’s better to drain and disconnect it. Washing machines can be damaged if water is left in the hoses and internal components before storage.

1. Select the Quick 29’ cycle and add bleach to the bleach compartment. Run your washing machine through the cycle without a load.
2. Turn the water taps off and disconnect the inlet hoses.
3. Unplug your washing machine from the electrical outlet, and leave your washing machine door open to allow air to circulate inside the tumbler.

If your washing machine has been stored in below-freezing temperatures, allow time for any leftover water in your washing machine to thaw out before using it.

WF8804LP-02990C_EN.indd 32 2011-5-28 16:23:41

troubleshooting and information codes

CHECK THESE POINTS IF YOUR WASHING MACHINE...

PROBLEM	SOLUTION
Will not start	• Make sure your washing machine is plugged in. • Make sure the door is firmly closed. • Make sure the water source tap(s) are turned on. • Make sure to press the Start/Pause button.
Has no water or not enough water	• Turn the water tap on fully. • Make sure the water source hose is not frozen. • Straighten the water intake hoses. • Clean the filter on the water intake hose.
Has detergent remains in the detergent drawer after the wash cycle is complete	• Make sure your washing machine is running with sufficient water pressure. • Make sure the detergent is added to the center of the detergent drawer.
Vibrates or is too noisy	• Make sure your washing machine is on a level surface. If the surface is not level, adjust the washing machine feet to level the appliance. • Make sure that the shipping bolts are removed. • Make sure your washing machine is not touching any other object. • Make sure the laundry load is balanced.
The washing machine does not drain and/or spin	• Straighten the drain hose. Eliminate kinked hoses. • Make sure the debris filter is not clogged.
Door is locked shut or will not open.	• Make sure all the water in your drum is drained out. • Make sure the door lock light is off. Door lock light will off after drained.

If the problem persists, contact your local Samsung Customer Service.

WF8804LP-02990C_EN.indd 33 2011-5-28 16:23:41

troubleshooting and information codes

INFORMATION CODES

When your washing machine malfunctions, you may see an information code on the display. If that happens, check this table and try the suggested solution before calling Customer Service.

CODE SYMBOL	SOLUTION
dE	• Close the door.
4E	• Make sure the source water tap is turned on. • Check the water pressure.
5E	• Clean the debris filter. • Make sure the drainage hose is installed correctly.
UE	• The laundry load is unbalanced. Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final spin result might be unsatisfactory and an “UE” error message will be shown in the display window.
cE/3E	• Call the after-sales service.
Sd/Sud	• This occurs when too much foaming is detected. It is also displayed while foaming is removed. When the removal is finished, the normal cycle proceeds.(This is one of the normal operations. It is an error for preventing non-sensing faults.)
Uc	• If the voltage of the supplied power is instable, the washing machine will be paused to protect its electric devices. • If the correct voltage is supplied, the cycle will resume automatically.

For any codes not listed above, or if the suggested solution doesn’t fix the problem, call your Samsung Service Centre or local Samsung dealer.

WF8804LP-02990C_EN.indd 34 2011-5-28 16:23:41

CYCLE CHART

(● user option)

PROGRAM	Max load(kg)		DETERGENT			Max Temp (°C)
	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700	Pre-wash	wash	Softener	
Cotton	8.0	7.0	●	yes	●	95
Synthetics	3.0	3.0	●	yes	●	60
Denim	3.0	3.0	●	yes	●	60
Sports Wear	2.5	2.5	●	yes	●	60
Delicates	2.5	2.5	-	yes	-	40
Wool	2.0	2.0	-	yes	-	40
Hand wash	2.0	2.0	-	yes	●	40
Baby Care	4.0	3.0	●	yes	●	95
Dark Garment	4.0	3.0	●	yes	●	40
Daily Wash	4.0	3.0	●	yes	●	60
Quick 29’	3.0	3.0	-	yes	●	60

PROGRAM	Spin Speed(MAX) rpm			Delay end	Cycle time (min)
	WF8804/ WF8704	WF8802/ WF8702	WF8800/ WF8700		
Cotton	1400	1200	1000	●	120
Synthetics	1200	1200	1000	●	84
Denim	800	800	800	●	73
Sports Wear	1200	1200	1000	●	65
Delicates	800	800	800	●	45
Wool	800	800	800	●	37
Hand wash	400	400	400	●	30
Baby Care	1400	1200	1000	●	129
Dark Garment	1200	1200	1000	●	70
Daily Wash	1200	1200	1000	●	65
Quick 29’	1400	1200	1000	●	29

1. A cycle with a prewash takes approx. 15 minutes longer.
2. The cycle duration data has been measured under the conditions specified in Standard IEC 60456 / EN 60456.
3. Consumption in individual homes may differ from the values given in the table due to variations in the pressure and temperature of the water supply, the load and the type of laundry.
4. When the Intensive Wash function is selected, the cycle time is increased for each cycle.

WF8804LP-02990C_EN.indd 35 2011-5-28 16:23:41

appendix

FABRIC CARE CHART

The following symbols provide garment care directions. The care labels include four symbols in this order: washing, bleaching, drying and ironing, and dry cleaning when necessary.
The use of symbols ensures consistency among garment manufacturers of domestic and imported items. Follow the care label directions to maximize garment life and reduce laundering problems.

	Resistant material		Can be ironed at 100 ˚C max
	Delicate fabric		Do not iron
	Item may be washed at 95 ˚C		Can be dry cleaned using any solvent
	Item may be washed at 60 ˚C		Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Item may be washed at 40 ˚C		Dry clean with aviation fuel, pure alcohol or R113 only
	Item may be washed at 30 ˚C		Do not dry clean
	Item may be hand washed		Dry flat
	Dry clean only		Can be hung to dry
	Can be bleached in cold water		Dry on clothes hanger
	Do not bleach		Tumble dry, normal heat
	Can be ironed at 200 ˚C max		Tumble dry, reduced heat
	Can be ironed at 150 ˚C max		Do not tumble dry

PROTECTING THE ENVIRONMENT

- This appliance is manufactured from recyclable materials. If you decide to dispose of this appliance, please observe local waste disposal regulations. Cut off the power cord so that the appliance cannot be connected to a power source. Remove the door so that animals and small children cannot get trapped inside the appliance.
- Do not exceed the detergent quantities recommended in the detergent manu-facturers' instructions.
- Use stain removal products and bleaches before the wash cycle only when strictly necessary.
- Save water and electricity by only washing full loads (the exact amount depends upon the program used).

DECLARATION OF CONFORMITY

This appliance complies with European safety standards, EC directive 93/68 and EN Standard 60335.

WF8804LP-02990C_EN.indd 36 2011-5-28 16:23:46

SPECIFICATIONS

TYPE			FRONT LOADING WASHING MACHINE					
DIMENSIONS			WF8804DP/WF8804CP/WF8804LP WF8802DP/WF8802CP/WF8802LP WF8800DP/WF8800CP/WF8800LP			WF8704DP/WF8704CP/WF8704LP WF8702DP/WF8702CP/WF8702LP WF8700DP/WF8700CP/WF8700LP		
			W598mm X D600mm X H844mm			W598mm X D600mm X H844mm		
WATER PRESSURE			50 kPa ~ 800 kPa					
WATER VOLUME			64 ℓ			56 ℓ		
NET WEIGHT			WF8804DP/ WF8800DP/ WF8800CP	WF8804CP/ WF8802CP/ WF8802DP	WF8804LP/ WF8802LP/ WF8800LP	WF8704DP/ WF8702DP/ WF8700DP	WF8704CP/ WF8702CP/ WF8700CP	WF8704LP/ WF8702LP/ WF8700LP
			74 kg	70 kg	68 kg	69 kg	69 kg	67 kg
WASH AND SPIN CAPACITY			8.0 kg			7.0 kg		
POWER CONSUMPTION	MODEL		WF8804DP/WF8804CP/WF8804LP WF8802DP/WF8802CP/WF8802LP WF8800DP/WF8800CP/WF8800LP			WF8704DP/WF8704CP/WF8704LP WF8702DP/WF8702CP/WF8702LP WF8700DP/WF8700CP/WF8700LP		
	WASHING		220 V	150 W		220 V	150 W	
			240 V	150 W		240 V	150 W	
	WASH AND HEATING		220 V	2000 W		220 V	2000 W	
			240 V	2400 W		240 V	2400 W	
	SPIN	MODEL	WF8804DP/ WF8804CP/ WF8804LP	WF8802DP/ WF8802CP/ WF8802LP	WF8800DP/ WF8800CP/ WF8800LP	WF8704DP/ WF8704CP/ WF8704LP	WF8702DP/ WF8702CP/ WF8702LP	WF8700DP/ WF8700CP/ WF8700LP
		230V	600 W	550 W	500 W	600 W	550 W	500 W
	PUMPING		34 W					
PACKAGE WEIGHT	MODEL		WF8804DP/WF8804CP/WF8804LP WF8802DP/WF8802CP/WF8802LP WF8800DP/WF8800CP/WF8800LP			WF8704DP/WF8704CP/WF8704LP WF8702DP/WF8702CP/WF8702LP WF8700DP/WF8700CP/WF8700LP		
	PAPER		2.2 kg			2.2 kg		
	PLASTIC		1.2 kg			1.2 kg		
SPIN REVOLUTIONS	MODEL		WF8804DP/WF8704DP WF8804CP/WF8704CP WF8804LP/WF8704LP		WF8802DP/WF8702DP WF8802CP/WF8702CP WF8802LP/WF8702LP		WF8800DP/WF8700DP WF8800CP/WF8700CP WF8800LP/WF8700LP	
	rpm		1400		1200		1000	

The appearance and specifications of the product are subject to change without prior notice for purposes of product enhancement.

WF8804LP-02990C_EN.indd 37 2011-5-28 16:23:46

memo

memo

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

Code No. DC68-02990C_EN

WF8804DP(A/F/G/H/S/V/W/Z)
WF8802DP(A/F/G/H/S/V/W/Z)
WF8800DP(A/F/G/H/S/V/W/Z)
WF8704DP(A/F/G/H/S/V/W/Z)
WF8702DP(A/F/G/H/S/V/W/Z)
WF8700DP(A/F/G/H/S/V/W/Z)
WF8804CP(A/F/G/H/S/V/W/Z)
WF8802CP(A/F/G/H/S/V/W/Z)
WF8800CP(A/F/G/H/S/V/W/Z)
WF8704CP(A/F/G/H/S/V/W/Z)
WF8702CP(A/F/G/H/S/V/W/Z)
WF8700CP(A/F/G/H/S/V/W/Z)

WF8804LP(A/F/G/H/S/V/W/Z)
WF8802LP(A/F/G/H/S/V/W/Z)
WF8800LP(A/F/G/H/S/V/W/Z)
WF8704LP(A/F/G/H/S/V/W/Z)
WF8702LP(A/F/G/H/S/V/W/Z)
WF8700LP(A/F/G/H/S/V/W/Z)

الغسالة

دليل المستخدم

إمكانيات هائلة

نشكرك على شراء هذا المنتج من Samsung.
للحصول على خدمة أكثر تكاملاً, الرجاء تسجيل
المنتج على موقع

www.samsung.com/register

SAMSUNG

ميزات الغسالة الجديدة من samsung

تتميز الغسالة الجديدة بأنها مزودة بإمكانية تغيير الطريقة التي ترغب في أداء الغسيل بها. تتميز غسالة Samsung بوجود كافة الميزات التي تحول المهام غير المرغوبة إلى شيء ممتع، بدءاً من سعتها ذات الحجم الفائق وحتى استهلاكها الاقتصادي للطاقة.

- **نظام العناية بملابس بالأطفال**

تتضمن غسالة Samsung برامج غسيل تضيف الحماية إلى ملابس الأطفال من ذوي البشرة الحساسة.
حيث تم إعداد هذه البرامج لتقليل التهابات البشرة عند الأطفال عن طريق تقليل بقايا مسحوق الغسيل. بالإضافة إلى أن هذه البرامج تصنف الغسيل إلى أنواع مختلفة ويتم غسيله وفقًا لخصائص كل نوع بحيث يشعر الأطفال بالانتعاش من نظافة الملابس وقتما يرتدونها.

- **التأمين ضد الأطفال**

تضمن وظيفة "التأمين ضد الأطفال" إبقاء الأطفال بعيداً عن الغسالة.
تعمل ميزة الأمان هذه على منع الأطفال من اللعب بالغسالة بالإضافة إلى تنبيهك عند تشغيلها.

- **اعتماد غسيل الصوف**

لقد تم اختبار الغسالة وقد تطابقت مع المواصفات التي حددتها شركة Woolmark الخاصة بغسل المنتجات الصوفية في الغسالة.
يجب غسل الأقمشة وفقاً للتعليمات الموجودة على البطاقة اللاصقة الموجودة على الملابس كما هو محدد من قبل شركتي Woolmark و Samsung.

- **تأجيل الإنهاء**

تأجيل الدورة حتى ١٩ ساعة بإمكانية زيادة ساعة وزيادة إمكانية استخدام الغسالة لاسيما عندما ترغب في الذهاب للخارج.

- **غسيل سريع**

لا يوجد وقت ضائع! تمنحك عملية الغسيل التي تستغرق أقل من ٣٠ دقيقة متسع من الوقت لمزاولة مهامك قبل فوات الأوان.
يمكن أن يصبح برنامج الغسيل السريع لمدة ٢٩ دقيقة حلاً لحياتك المزدحمة. يمكنك الآن غسيل الملابس المفضلة خلال ٢٨ دقيقة فقط، بشكل مضمون!

- **برنامج الأنسجة الرقيقة والغسيل اليدوي**

يمكنك اتخاذ حذر إضافي عند غسيل مثل هذه الأنواع من الملابس وذلك عن طريق تحديد درجة الحرارة الملائمة ودورة الغسيل الرقيق وكمية الماء المناسبة.

- **سخان خزفي للقوة وتوفير الكهرباء (طرازات محددة)**

يتميز السخان الخزفي المبتكر بأنه ذو قوة مضاعفة عن السخانات العادية.
يوفر هذا من تكاليف الصيانة والإصلاحات. كما أنه يحفف من حدة الماء الساخن على الملابس ويوفر الكهرباء.

WF8804LP-02990C_AR□.indd 2 2011/5/28 22:00:41

- **توفير الكهرباء A+AA**

لقد حققنا التميز! حصلت طرازات WF8804(DP/CP/LP)/WF8704(DP/CP/LP) من Samsung، أحدث الطرازات المتطورة والمزودة بدورة تبلغ ١٤٠٠ لفة في الدقيقة، على درجة A ثلاث مرات: A+ لاستهلاك الكهرباء و A للأداء في دورة الغسيل و A للأداء عند التجفيف بالدوران. والنتيجة، توفير المزيد من الوقت والمال الذين يمكن استغلالهما في ما هو أثمن وأغلى - عائلتك.

- **Digital Graphic Display (شاشة عرض رسومية رقمية)**

تتميز لوحة التحكم في Digital Graphic Display (شاشة العرض الرسومية الرقمية) بالوضوح وسهولة الاستعمال لتقليل التهيج والمضايقة. تتميز شاشة Digital Graphic Display (العرض الرسومية الرقمية) بسهولة التشغيل التي تتيح لك القيام بعمليات الضبط بسرعة ودقة على عملية الغسيل للحصول على نتائج غسيل ممتازة.

- **Air Refresh (التنظيف الهوائي) (طرازات محددة)**

قم بالتنظيف الهوائي لملابسك المفضلة بواسطة الهواء بعد قضائك لحفلة أو لمجرد الخروج من المنزل (التخلص من رائحة الطعام، السجائر). لا تحتاج الملابس التي لا يوجد بها بقع إلى أن يتم غسلها. كل ما عليك هو تنظيفها بالهواء. تتوفر ٣ دورات مختلفة لأنواع الأقمشة المتنوعة.

- **باب واسع**

تتوفر بالباب الذي يتميز باتساعه الكبير فتحة لإتاحة مشاهدة الغسيل بشكل مناسب! كما أنه يسمح بإضافة الغسيل وإزالته بسهولة، وخصوصا أنواع الغسيل كبيرة الحجم مثل المفروشات والمناشف إلخ.

يحتوى هذا الدليل على معلومات هامة حول عملية التركيب، والاستخدام، وصيانة غسالة Samsung الجديدة. ويمكنك الرجوع إليه للتعرف على شكل لوحة التحكم، والتعليمات التي تتعلق بكيفية استخدام الغسالة، والتلميحات التي تتعلق باستغلال أحدث الميزات والإمكانات المتوفرة بها. يرشدك قسم "**استكشاف المشكلات وإصلاحها ورموز المعلومات**" الموجود في صفحة ٣٣ إلى ما يجب عليك فعله في حالة حدوث خطأ ما بالغسالة الجديدة.

WF8804LP-02990C_AR□.indd 3 2011/5/28 22:00:41

معلومات السلامة

تهانينا لشرائك الغسالة الجديدة ™ Samsung ActivFresh. يحتوي هذا الدليل على معلومات هامة خاصة بتركيب الغسالة واستخدامها والعناية بها. الرجاء استغراق الوقت اللازم لقراءة هذا الدليل بغرض الاستفادة الكاملة من المنافع والمزايا العديدة الموجودة في الغسالة.

ما تحتاج إلى معرفته بشأن تعليمات السلامة

الرجاء قراءة هذا الدليل جيداً لضمان معرفتك بمدى التشغيل الآمن والفعال للمزايا والوظائف الكثيرة في غسالتك الجديدة والاحتفاظ به في مكان آمن بالقرب من الغسالة من أجل الرجوع إليه مستقبلاً. استخدم هذا الجهاز للغرض المخصص له فقط كما هو محدد في دليل التعليمات هذا.
لا تغطي التحذيرات وتعليمات السلامة الهامة الواردة في هذا الدليل جميع الحالات والمواقف المحتملة التي قد تحدث. تقع عليك مسئولية الاستعانة بحواسك العامة وتوخي الحيطة والعناية عند تركيب الغسالة الخاصة بك وصيانتها وتشغيلها.
لكون تعليمات التشغيل التالية تغطي موديلات متعددة، فقد تختلف ميزات الغسالة الخاصة بك اختلافاً بسيطاً عن ميزات الغسالات المذكورة في هذا الدليل وقد لا تنطبق جميع علامات التحذير.إذا كانت لديك أي أسئلة أو مخاوف، فاتصل بأقرب مركز خدمة أو البحث عن المساعدة أو المعلومات عبر الإنترنت الموجودة في الموقع www.samsung.com.

رموز الأمان والاحتياطات الهامة

ما المقصود من الأيقونات والعلامات الموجودة في دليل المستخدم هذا:

تحذير	مخاطر أو ممارسات غير آمنة قد تؤدي إلى **حدوث إصابة شخصية جسيمة، الوفاة، و/ أو الإضرار في الممتلكات**.
تنبيه	مخاطر أو ممارسات غير آمنة قد تؤدي إلى **حدوث إصابة شخصية جسيمة، و/أو الإضرار في الممتلكات**.
تنبيه	لتقليل خطر نشوب حريق، أو انفجار أو صعقة كهربائية أو إصابة جسيمة عند استخدام الغسالة الخاصة بك، قم بإتباع احتياطات السلامة الأساسية هذه:

	ممنوع.
	ممنوع الفك.
	ممنوع اللمس.
	اتبع الإرشادات كما هي.
	قم بفصل موصل الطاقة من مقبس الحائط.
	تأكد من أن الغسالة مثبته على الأرض لمنع حدوث صدمة كهربائية.
	اتصل بمركز الخدمة للمساعدة.
	ملاحظة

تهدف علامات التحذير هذه إلى منع حدوث إصابات لك وللآخرين.
لذا الرجاء إتباعها بعناية.
قم بحفظ هذا الدليل في مكان آمن بعد قراءته للاحتفاظ به كمرجع في المستقبل.

قم بقراءة كل التعليمات قبل استخدام هذا الجهاز.

وكما هو الحال مع أي جهاز يستخدم الكهرباء والأجزاء المتحركة، يوجد مخاطر محتملة. لتشغيل هذا الجهاز بأمان، تعرف على عملية التشغيل الخاصة به وتوخي الحيطة عند استخدامه.

WF8804LP-02990C_AR□.indd 4 2011/5/28 22:00:42

لا تدع الأطفال (أو الحيوانات الأليفة) تعبث على الغسالة الآلية الخاصة بك أو بداخلها. لا يتم فتح باب الغسالة بسهولة من الداخل. وقد يتعرض الأطفال للإصابة البالغة في حال انحشارهم بداخلها.

هذا الجهاز غير مخصص للاستخدام من قبل الأشخاص (بما في ذلك الأطفال) الذين يعانون من نقص في قدراتهم البدنية أو الحسية أو العقلية أو انعدام الخبرة و المعرفة إلا إذا كان هنالك إشراف أو إرشاد يتعلق باستخدام هذا الجهاز من قبل شخص مسؤول عن سلامتهم.

يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.

في حال تلف القابس (سلك إمداد الطاقة)، يجب استبداله بواسطة الجهة الصانعة أو وكيل الخدمة التابعة لها أو أي شخص مؤهل كذلك لتجنب حدوث الخطر.

يجب وضع هذا الجهاز في مكان بحيث يتيح الوصول بسهولة إلى قابس الطاقة وألسنة قفل إمداد الماء وأنابيب التصريف.

عندما تكون الغسالة مزودة بفتحات تهوية في القاعدة، قم بالتأكد من عدم إعاقة الفتحات بسبب السجاد أو أي عوائق أخرى.

استخدم مجموعات الخراطيم الجديدة ولا يجب إعادة استخدام مجموعات الخراطيم القديمة.

WF8804LP-02990C_AR□.indd 5 2011/5/28 22:00:42

معلومات السلامة

علامات تحذير هامة خاصة بالتركيب

يجب إجراء تركيب هذا الجهاز من قبل فني مؤهل أو إحدى شركات الخدمة.
- عدم الالتزام في القيام بهذا قد يؤدي إلى حدوث صعقة كهربائية أو انفجار أو مشكلات في المنتج أو وقوع الإصابة.

يعد الجهاز ثقيل الوزن ويجب توخي الحذر عند رفعه

قم بتوصيل كابل الطاقة في مقبس التيار الكهربائي المتناوب بقوة ٢٢٠ فولت/ ٦٠ هرتز/ ١٥ أمبير أو أعلى واستخدم المقبس لهذا الجهاز فقط. علاوة على ذلك، لا تستخدم كابل الاستطالة.
- قد يؤدي وضع قابس الجهاز مع قوابس أجهزة أخرى مشتركة في نفس مقبس الكهرباء الموجود بالحائط باستخدام موزع (مشترك) كهربائي أو تمديد كابل الطاقة إلى حدوث صعقة كهربائية أو نشوب حريق.
- تأكد من أن الفلطية الكهربائية والتردد والتيار الكهربائي غير مختلفين عن مواصفات المنتج. عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق. عدم توصيل قابس الطاقة في مقبس الكهرباء بالحائط بشكل ثابت.

قم بإزالة جميع المواد الغريبة مثل الأتربة أو الماء من أطراف توصيل قابس الطاقة ونقاط التوصيل باستخدام قطعة ملابس جافة بشكل منتظم.
- قم بفصل قابس الطاقة وتنظيفه بواسطة قطعة قماش جافة.
- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

قم بتوصيل قابس الطاقة في مقبس الكهرباء الموجود بالحائط بالاتجاه الصحيح حتى يسير الكابل باتجاه الأرضية.
- في حالة قيامك بتوصيل قابس الطاقة في المقبس بالاتجاه المعاكس. فقد تتلف الأسلاك الكهربائية في الكابل بما يؤدي لحدوث صعقة كهربائية أو نشوب حريق.

احتفظ بجميع مواد التغليف بطريقة جيدة بعيداً عن متناول يد الأطفال حيث قد تشكل هذه المواد خطراً على الأطفال.
- إذا وضع طفل حقيبة فوق رأسه. فقد يؤدي ذلك إلى تعرضه للاختناق.

في حال تلف الجهاز أو قابس الطاقة أو كابل الطاقة، اتصل بأقرب مركز خدمة لديك.

يجب تأريض هذا الجهاز بطريقة صحيحة.
لا تقم بالتأريض على أنبوب الغاز، أو أنبوب الماء البلاستيكي أو خط الهاتف.
- قد يؤدي ذلك إلى حدوث صعقة كهربائية أو نشوب حريق أو انفجار أو مشكلات مع المنتج
- لا تقم مطلقاً بتوصيل كابل الطاقة في مقبس غير مؤرض بطريقة صحيحة والتأكد من التوافق مع القوانين المحلية والقومية.

لا تقم بتركيب هذا الجهاز بالقرب من مدفأة أو أي مادة قابلة للاشتعال.
لا تقم بتركيب هذا الجهاز في موقع به رطوبة أو ملوث بالزيت أو الأتربة، أو في موقع معرض لأشعة الشمس المباشرة والماء (قطرات الماء).

لا تقم بتركيب الجهاز في موقع درجة الحرارة به منخفضة
- قد يؤدي التجمد إلى انفجار الأنابيب

لا تقم بتركيب هذا الجهاز في موقع به تسرب للغاز.
- قد يؤدي هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تستخدم المحول الكهربائي.
- قد يؤدي هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تستخدم قابس الطاقة التالف أو كابل الطاقة التالف أو مقبس الكهرباء غير الثابت على الحائط.
- قد يؤدي هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تسحب أو ثني كابل الطاقة بقوة.
لا تقم بثني أو ربط كابل الطاقة.

WF8804LP-02990C_AR□.indd 6 2011/5/28 22:00:43

لا تقم بتعليق كابل الطاقة فوق أحد الأشياء المعدنية، أو وضع شيء ثقيل فوق كابل الطاقة، أو إدخال كابل الطاقة بين الأشياء، أو دفع كابل الطاقة في المساحة خلف الجهاز.

- قد يؤدي هذا إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تقم بسحب كابل الطاقة عند نزع قابس الطاقة.

- قم بنزع قابس الطاقة بإمساكه من القابس.
- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

لا تضع كابل الطاقة والأنابيب أرضاً حيث قد تطرح أرضاً فوقهم.

علامات التنبيه الخاصة بالتركيب

تنبيه

يجب وضع هذا الجهاز بطريقة تتيح إمكانية الوصول إلى القابس بسهولة.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق من جراء التسرب الكهربائي.

قم بتركيب جهازك على أرضية مستوية وصلبة يمكنها تحمل وزن الجهاز.

- عدم الالتزام بالقيام بذلك قد يؤدي إلى حدوث اهتزازات أو تحركات أو ضوضاء غير عادية أو مشكلات مع المنتج.

علامات تحذير هامة خاصة بالاستخدام

تحذير

إذا تعرض الجهاز للغمر بالماء، فقم بقطع إمداد الماء والطاقة فوراً واتصل بأقرب مركز خدمة.

- لا تلمس قابس الطاقة ويديك مبتلة
- عدم الالتزام بالقيام بذلك قد يؤدي إلى حدوث صعقة كهربائية

إذا كان المولد يصدر ضوضاء غير طبيعية، أو رائحة احتراق أو دخان، فقم بنزع قابس الطاقة على الفور والاتصال بأقرب مركز خدمة لديك.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

في حال حدوث تسرب للغاز (كغاز البروبين، وغاز البترول المسال، وما شابه ذلك.)، فقم بالتهوية فوراً دون لمس قابس الطاقة، لا تلمس الجهاز أو كابل الطاقة.

- لا تستخدم مروحة تهوية.
- فقد ينجم عن ذلك انفجار أو نشوب حريق.

لا تدع الأطفال يلعبون بداخل الغسالة أو فوقها، علاوة على ذلك، عند التخلص من الجهاز، قم بإزالة ذراع باب الغسالة.

- في حالة الانحشار بالداخل، فقد يتعرض الطفل للانحشار والاختناق لحين الموت.

تأكد من إزالة التغليف (الإسفنج، ستيرفوم) المثبتة بالجزء السفلي من الغسالة قبل استخدامها.

WF8804LP-02990C_AR□.indd 7 2011/5/28 22:00:43

معلومات السلامة

لا تغسل الأشياء الملوثة بالغازولين أو الكيروسين أو البنزين أو مخفف الطلاء (التنر) أو الكحول أو أي أشياء قابلة للاشتعال أو مواد متفجرة.

- قد يؤدي هذا إلى حدوث صعقة كهربائية أو نشوب حريق أو انفجار.

لا تقم بفتح باب الغسالة عنوة أثناء تشغيلها (الغسيل ذات درجة عالية/ تجفيف/ اللف).

- قد تودي المياه المتدفقة من خارج الغسالة إلى حدوث حروق أو جعل الأرضية زلقة.

قد يؤدي ذلك إلى حدوث إصابة.

- قد يؤدي فتح الباب عنوة إلى تلف المنتج أو حدوث إصابة.

لا تدخل يديك أسفل الغسالة.

- قد يؤدي ذلك إلى حدوث إصابة.

لا تلمس قابس الطاقة ويديك مبتلة.

- قد يؤدي ذلك إلى حدوث الصعقة الكهربائية.

لا تقم بإيقاف تشغيل الجهاز عن طريق نزع قابس الطاقة أثناء التشغيل.

- توصيل قابس الطاقة في مقبس الكهرباء بالحائط مرة أخرى قد يؤدي إلى حدوث شرارة وبالتالي حدوث صعقة كهربائية أو نشوب حريق.

لا تدع الأطفال أو الأشخاص العاجزين يستخدمون الغسالة دون رقابة. لا تدع الأطفال يصعدون فوق الجهاز

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو حدوث حروق أو إصابة.

لا تدخل يدك أو أي شيء معدني أسفل الغسالة أثناء تشغيلها.

- قد يؤدي ذلك إلى حدوث إصابة.

لا تقم بنزع قابس الجهاز عن طريق سحبه من كابل الطاقة. وقم دوماً بإمساك القابس بإحكام واسحبه مباشرة للخارج من مصدر التيار الكهربائي.

- قد يؤدي تلف الكابل إلى حدوث قصور في الدائرة الكهربائية (ماس كهربائي). ونشوب حريق. و/أو صعقة كهربائية

لا تحاول القيام بعلمية الإصلاح أو التفكيك أو التعديل على الجهاز بنفسك.

- لا تستخدم أي مصهر (كالنحاس. أو السلك الفولاذي أو ما شابه ذلك) بخلاف المصهر القياسي.
- عند تتطلب الضرورة إصلاح الجهاز أو إعادة تركيبه. فقم بالاتصال بأقرب مركز خدمة لديك.
- عدم الالتزام في القيام بهذا قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق أو مشكلات في المنتج أو وقوع الإصابة.

في حال دخول أي أشياء غريبة كالماء إلى الجهاز. فقم بنزع قابس الطاقة والاتصال بأقرب مركز خدمة لديك.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

عندما يصبح خرطوم إمداد الماء غير مثبت بإحكام في الصنبور ويغمر الجهاز بالماء. فقم بنزع قابس الطاقة.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

قم بنزع قابس الطاقة في حال عدم استخدام الجهاز لفترات زمنية طويلة أو أثناء الرعد/ العاصفة البرقية.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

WF8804LP-02990C_AR□.indd 8 2011/5/28 22:00:43

علامات التنبيه الخاصة بالاستخدام

تنبيه

في حال تلوث الغسالة بسبب المواد الغريبة كالمواد المنظفة أو الأوساخ أو بقايا الطعام، وما شابه ذلك، فقم بنزع قابس الطاقة وتنظيف الغسالة باستخدام قطعة قماش ناعمة ورطبة.

- عدم الالتزام للقيام بذلك قد يؤدي إلى تغيير اللون أو التشوه أو التلف أو الصدأ.

قد ينكسر الزجاج الأمامي بسبب الاصطدام القوي. توخي الحيطة عند استخدام الغسالة.

- عندما ينكسر الزجاج، قد يؤدي ذلك إلى حدوث الإصابة.

بعد حدوث قطع لإمداد الماء أو عند إعادة توصيل خرطوم إمداد الماء، قم بفتح الصنبور ببطء.
قم بفتح الصنبور ببطء بعد الفترة الطويلة من عدم الاستخدام.

- قد يؤدي ضغط الهواء في خرطوم إمداد الماء أو أنبوب الماء إلى حدوث تلف بأحد الأجزاء أو يؤدي إلى تسرب الماء.

في حال حدوث خطأ بالتصريف أثناء التشغيل، تحقق إذا كانت توجد مشكلة في التصريف أم لا.

- إذا تم استخدام الغسالة عند تعرضها للغمر بالماء بسبب مشكلة تسريب ما، فقد يؤدي ذلك إلى حدوث صعقة كهربائية أو نشوب حريق من جراء التسرب الكهربائي.

قم بإدخال الملابس في الغسالة بشكل كامل تماماً حتى لا تنحشر الملابس في الباب.

- في حال تعرض الملابس للانحشار بالباب، فقد يؤدي ذلك إلى تلف الملابس أو الغسالة، أو يؤدي إلى تسرب الماء.

تأكد من قفل الصنبور في حال عدم استخدام الغسالة.

- تأكد من أن البرغي الموجود في وصلة خرطوم الإمداد محكمة الربط بطريقة صحيحة.
- عدم الالتزام في القيام بذلك قد يؤدي إلى الإضرار في الممتلكات أو حدوث الإصابة.

تأكد إذا كان مانع التسرب المطاطي غير ملوث بأي مواد غريبة (نفايات، خيوط، ما شابه ذلك).

- إذا لم يكن الباب مغلق تماماً، فقد يؤدي ذلك إلى تسرب الماء.

افتح الصنبور وتأكد إذا كانت موصل خرطوم إمداد الماء محكم الربط جيداً وعدم وجود أي تسرب للماء قبل استخدام المنتج.

- إذا كانت البراغي على موصل خرطوم إمداد الماء غير مربط بإحكام، فقد يؤدي ذلك إلى تسرب الماء.

لتقليل خطر نشوب الحريق أو الانفجار:

- في ظل ظروف معينة، قد يتم إنتاج غاز الهيدروجين في نظام الماء الساخن مثل سخان ماء الاستحمام الساخن الخاص بك والذي لم يتم استخدامه لمده أسبوعين أو أكثر. غاز الهيدروجين من الغازات القابلة للانفجار. في حال عدم استخدام نظام الماء الساخن الخاص بك لمدة أسبوعين أو أكثر، فقم بفتح جميع حنفيات الماء الساخن في منزلك، ودع الماء يتدفق لعدة دقائق قبل استخدام غسالتك. سيؤدي ذلك إلى تحرير تراكم غاز الهيدروجين. ونظراً لأن غاز الهيدروجين من الغازات القابلة للاشتعال، فلا تقم بالتدخين أو إشعال اللهب المكشوف خلال هذا الوقت. قم بالتهوية فوراً دون لمس قابس الطاقة في حال حدوث تسرب غاز.

WF8804LP-02990C_AR□.indd 9 2011/5/28 22:00:43

معلومات السلامة

لا تقف فوق الجزء العلوي من الجهاز أو تضع الأشياء (كالملابس، الشموع المشتعلة، السجائر المشتعلة، الأطباق، المواد الكيميائية، الأشياء المعدنية وما شابه ذلك) على الجهاز.

- قد يؤدي ذلك إلى حدوث صعقة كهربائية أو نشوب حريق أو مشكلات مع المنتج أو حدوث إصابة.

لا تقم برش أي مادة متطايرة كالمبيد الحشري على سطح الجهاز.

- فبالإضافة إلى كون تلك المواد ضارة على البشر، فأنها قد تؤدي كذلك إلى حدوث الصعقة الكهربائية أو نشوب الحريق أو مشكلات مع المنتج.

لا تقم بوضع أي شيء يولد مجالاً كهرومغناطيسياً بالقرب من الغسالة.

- قد يؤدي ذلك إلى حدوث إصابة بسبب العطل.

ولكون الماء الذي تم تصريفه أثناء دورة الغسل عالية درجة الحرارة أو دورة التجفيف ماء ساخن، فلا تلمسه.

- قد يؤدي ذلك إلى حدوث حروق أو إصابات.

لا تقم بغسل أو لف أو تجفيف المقاعد المقاومة للماء أو المفارش أو الملابس (*) إلا إذا كان الجهاز الخاص بك مزوداً ببرنامج خاص لغسيل هذه الأشياء.

- لا تقم بغسل المفارش الكثيفة والصلبة حتى لو كانت بها علامة تتيح غسلها بالغسالة على ملصق العناية.
- قد يؤدي ذلك إلى الإصابة أو تلف الغسالة أو الجدران أو الأرضية أو الملابس بسبب الاهتزازات غير العادية.

* الشراشف الصوفية وأغطية المطر وملابس الصيد وسراويل التزلج وأكياس النوم وأغطية حفاظات الأطفال وبدل التعرق وأغطية الدراجات والدراجة الآلية والسيارات وما شابه ذلك.

لا تقم بتشغيل الغسالة عند إزالة صندوق مادة التنظيف منها.

- فقد يؤدي ذلك إلى حدوث صعقة كهربائية أو إصابة ناجمة عن تسرب الماء.

لا تلمس الجزء الداخلي من الأنبوب أثناء أو بعد التجفيف مباشرة لأنه يكون ساخنا.

- قد يؤدي ذلك إلى حدوث حروق.

لا تدخل يديك في صندوق المادة المنظفة بعد فتحه.

- قد يؤدي ذلك إلى تعرض يدك للإصابة حيث قد تنحشر بواسطة جهاز إدخال المنظف. لا تقم بوضع أية أشياء (كالأحذية، بقايا الطعام، الحيوانات) بخلاف الملابس في الغسالة.
- قد يؤدي ذلك إلى تلف الغسالة أو حدوث إصابة أو موت الحيوانات بسبب الاهتزازات غير الطبيعية.

لا تقم بالضغط على الأزرار باستخدام أشياء حادة كالدبابيس والسكاكين والأظافر وما شابه ذلك.

- قد يؤدي هذا إلى حدوث صعقة كهربائية أو حدوث إصابة.

لا تقم بغسل الملابس الملوثة بالزيت أو الكريمات أو سوائل اللوشيون التي توجد عادة في متاجر بيع مستحضرات العناية بالبشرة أو عيادات التدليك.

- فقد يؤدي ذلك إلى تشوه مانع التسرب المطاطي وتسرب الماء.

لا تترك الأشياء المعدنية كدبابيس الأمان أو دبابيس الشعر أو مادة التبييض في الحوض لفترات زمنية طويلة.

- فقد يؤدي ذلك إلى تكون صدأ بالحوض.
- في حال بدء ظهور الصدأ على سطح الحوض، قم بوضع مادة تطهير (معتدلة) على السطح واستخدم قطعة إسفنج للتنظيف. لا تستخدم مطلقاً فرشاة معدنية.

لا تستخدم مادة تنظيف جافة مباشرة ولا تقم بغسل الملابس الملوثة أو شطفها أو لفها بواسطة مادة تنظيف جافة.

- قد ينجم عن ذلك حدوث احتراق أو اشتعال تلقائي بسبب حرارة أكسدة الزيت.

لا تستخدم ماء ساخن من أجهزة التبريد/ التدفئة.

- فقد ينجم عن ذلك مشكلات بالغسالة.

WF8804LP-02990C_AR□.indd 10 2011/5/28 22:00:43

لا تستخدم صابون غسيل اليدين المعتدل في الغسالة.

- في حال تصلبه وتراكمه بداخل الغسالة، فقد يؤدي ذلك إلى حدوث مشكلات مع المنتج أو حدوث تغيير اللون أو الصدأ أو روائح سيئة.

لا تقم بغسل الملابس كبيرة الحجم مثل الشراشف في شبكة الغسالة.

- قم بوضع الجوارب وحمالات الصدر في شبكة الغسالة وغسلها مع ملابس أخرى.
- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث إصابة بسبب الاهتزازات غير العادية.

لا تستخدم مواد منظفة صلبة.

- إذا تراكم بداخل الغسالة، فقد يؤدي ذلك إلى تسرب الماء.

عندما تكون الغسالة مزودة بفتحات تهوية في القاعدة، قم بالتأكد من عدم إعاقة الفتحات بسبب السجاد أو أي عوائق أخرى.

تأكد من أن جميع جيوب الملابس المراد غسلها فارغة.

- فالأشياء الصلبة والحادة مثل العملات المعدنية أو دبابيس الأمان أو المسامير أو البراغي أو الأحجار قد تودي إلى حدوث تلف بالغ بالجهاز.

لا تقم بغسل الملابس ذات الأبازيم أو الأزرار الكبيرة أو التي بها أشياء معدنية ثقيلة أخرى.

علامات تحذير هامة خاصة بالتنظيف

لا تقم بتنظيف الجهاز بواسطة ماء مرشوش مباشرة عليها.
لا تستخدم البنزين أو مخفف الطلاء أو الكحول لتنظيف الجهاز.

- فقد يؤدي هذا إلى حدوث تغيير اللون أو التشوه أو التلف أو حدوث صعقة كهربائية أو نشوب حريق.

قبل تنظيف الجهاز أو إجراء الصيانة عليه، قم بنزع قابس الجهاز من مقبس الحائط.

- عدم الالتزام في القيام بذلك قد يؤدي إلى حدوث صعقة كهربائية أو نشوب حريق.

WF8804LP-02990C_AR□.indd 11 2011/5/28 22:00:43

المحتويات

إعداد الغسالة ١٣

١٣ التحقق من الأجزاء
١٤ استيفاء متطلبات التركيب
١٤ مصدر الطاقة الكهربائية والتوصيل الأرضي
١٤ توريد الماء
١٥ التصريف
١٥ سطح الأرضية
١٥ درجة الحرارة المحيطة
١٥ تركيب القنطرة أو الخزانة
١٥ تركيب الغسالة

غسيل الملابس ٢١

٢١ الغسيل للمرة الأولى
٢١ إرشادات أساسية
٢٢ استخدام لوحة التحكم
٢٤ التأمين ضد عبث الأطفال
٢٤ إيقاف تشغيل الصوت
٢٤ تأجيل الإنهاء
٢٥ غسيل الملابس باستخدام قرص تحديد الدورة
٢٦ غسيل الملابس يدوياً
٢٦ تعليمات الغسيل
٢٨ معلومات حول مسحوق الغسيل والمواد الإضافية
٢٨ ما هو مسحوق الغسيل الذي يمكنك استخدامه
٢٨ درج مسحوق الغسيل

تنظيف الغسالة وصيانتها ٢٩

٢٩ تصريف الماء من الغسالة عند الطوارئ
٢٩ تنظيف الأسطح
٣٠ تنظيف درج مسحوق الغسيل والجزء المرتد منه
٣١ تنظيف مصفاة المخلفات
٣١ تنظيف المصفاة الشبكية المتصلة بخرطوم الماء
٣٢ إصلاح جهاز غسالة متجمد
٣٢ تخزين الغسالة

استكشاف المشاكل وحلها ورموز المعلومات ٣٣

٣٣ تحقق مما يلي إذا كانت الغسالة...
٣٤ رموز المعلومات

جدول الدورة ٣٥

٣٥ جدول الدورة

الملحق ٣٦

٣٦ جدول العناية بالأقمشة
٣٦ حماية البيئة
٣٦ إعلان التوافق
٣٧ المواصفات

WF8804LP-02990C_AR□.indd 12 2011/5/28 22:00:43

إعداد الغسالة

تأكد من إتباع هذه الإرشادات بدقة عند التركيب حتى تعمل الغسالة بشكل صحيح ولتجنب حدوث إصابات عند القيام بالغسيل.

التحقق من الأجزاء

أخرج الغسالة بحرص من الصندوق وتأكد من وجود كافة الأجزاء الموضحة أدناه. في حالة تلف الغسالة أثناء عملية الشحن، أو عدم استلامك لكافة الأجزاء، قم بالاتصال بخدمة عملاء Samsung أو الموزع المعتمد لدى Samsung.

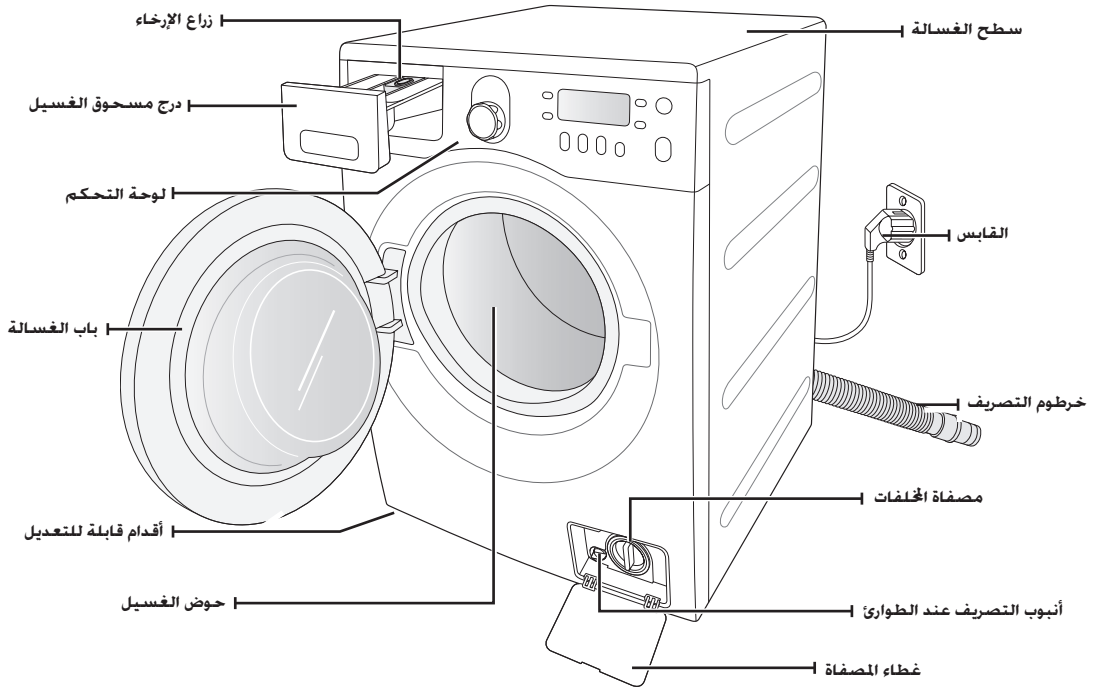

مفاتيح الربط | • أغطية فتحات المسامير | خرطوم توريد الماء | سناد الخرطوم

• **أغطية فتحات المسامير** : يعتمد عدد أغطية فتحات المسامير على حسب الطراز (من ٣ إلى ٥ أغطية).

WF8804LP-02990C_AR□.indd 13 2011/5/28 22:00:44

إعداد الغسالة

استيفاء متطلبات التركيب

مصدر الطاقة الكهربائية والتوصيل الأرضي

لتقليل خطر حدوث حريق أو صدمة كهربائية أو إصابة جسدية، يجب أن تتم عملية توصيل الأسلاك والتوصيل الأرضي وفقاً لأحدث نسخة من اللائحة القومية أو الوطنية للكهرباء ANSI/FNPA، رقم ٧٠ والقوانين والضوابط المحلية. تقع على عاتق المالك مسؤولية توفير المتطلبات الكهربائية الكافية لهذا الجهاز.

تحذير
- ممنوع استخدام كبلات إضافية.
- استخدم سلك التيار الكهربائي المرفق مع الغسالة فقط.

عند الإعداد لعملية التركيب، تأكد أن سلك التيار الكهربائي يوفر:
- قاطع دائرة كهربائية أو منصهر بقدرة ٢٢٠ - ٢٤٠ فولط تيار متردد / ٥٠ هرتز
- دائرة كهربائية فرعية لتشغيل الغسالة فقط

يجب تثبيت الغسالة على الأرض بشكل صحيح. وفي حالة حدوث خلل أو تعطل في الأداء، سيؤدي التوصيل الأرضي إلى تقليل خطورة حدوث صدمة كهربائية وذلك بتوفير مسار من المقاومة للتيار الكهربائي.
تكون الغسالة مزودة بسلك تيار كهربائي به ثلاثة قوابس شوكية أرضية لاستخدامها في الأرضي المركب المناسب بشكل صحيح

لا تقم بتوصيل السلك الأرضي بخطوط المواسير المصنوعة من البلاستيك، أو خطوط الغاز، أو مواسير الماء الساخن.

فقد يؤدي التوصيل غير الصحيح للموصل الأرضي الخاص بالغسالة إلى حدوث صعقة كهربائية.
استشر الفني المتخصص أو الموظف المختص بالخدمة إذا لم تكن متأكداً من صحة التوصيل الأرضي للغسالة. يحظر استخدام قابس أخر غير المرفق مع الغسالة. وفي حالة عدم ملاءمته مع مأخذ التيار، استعن بالفني المتخصص لتركيب مأخذ مناسب.

توريد الماء

يتم ملء الغسالة بشكل سليم عندما يكون ضغط الماء ٥٠ ~ ٨٠٠ كيلوباسكال. قد يتسبب ضغط الماء الذي يكون أقل من ٥٠ كيلوباسكال في سقوط صمام الماء مما يؤدي إلى عدم إغلاقه بشكل كامل. أو قد تستغرق الغسالة وقت أطول مما تسمح به عناصر التحكم للأها، مما ينتج عنه إيقاف تشغيل الغسالة. (تم تضمين نظام تحديد وقت ملء الغسالة في عناصر التحكم والذي تم تصميمه للحد من عمليات تدفق/فيضان الماء في حالة ارتخاء الخرطوم الداخلي.)
يجب أن تكون صنابير الماء على بعد ٤ أقدام (١٢٢ سم) من اللوحة الخلفية للغسالة لتسهيل وصول خراطيم صنابير الماء المرفقة إلى الغسالة.

تقوم معظم متاجر توريد المواسير ببيع خراطيم صنابير الماء بمختلف أطوالها التي تصل إلى ١٠ أقدام (٣٠٥ سم).

يمكنك تقليل مخاطر تسرب الماء أو تلوثه عن طريق:
- تيسير وصول الخراطيم إلى صنابير الماء.
- إغلاق الصنابير في حالة عدم استخدام الغسالة.
- تحقق بشكل دوري مما إذا كانت مثبتات الخرطوم تسرب الماء.

تحذير
قم بفحص كافة التوصيلات الموجودة في صمام وصنابير الماء للتحقق مما إذا كان هناك أي تسريبات قبل استخدام الغسالة للمرة الأولى.

WF8804LP-02990C_AR□.indd 14 2011/5/28 22:00:44

التصريف

توصي Samsung باستخدام ماسورة رأسية يصل ارتفاعها إلى ٦٥ سم. يجب توجيه خرطوم التصريف باستخدام مشبك خرطوم التصريف إلى اتجاه الماسورة الرأسية. يجب أن تكون الماسورة الرأسية كبيرة بدرجة كافية لإدخال القطر الخارجي لخرطوم التصريف. يقوم المصنع بإرفاق خرطوم التصريف.

سطح الأرضية

يجب تثبيت الغسالة على سطح ثابت وصلب للحصول على أفضل أداء. قد تحتاج الأسطح الخشبية إلى تقويتها لتقليل الاهتزاز و/أو الأحمال غير المتزنة. يكون السجاد وأسطح البلاط الناعمة بمثابة عوامل مساهمة في عمليات الاهتزاز واحتمالية تحرك الغسالة بشكل طفيف أثناء دورة التجفيف.
لا تقم بتركيب الغسالة على أرضية أو بنية ضعيفة.

درجة الحرارة المحيطة

لا تقم بتركيب الغسالة في مناطق قد يتجمد فيها الماء، حيث أن الغسالة دوماً ما تحتفظ ببعض الماء في صمام الماء والمضخة وأجزاء من الخرطوم. يمكن أن يتسبب الماء المتجمد الموجود في المواسير في إلحاق ضرر بالأحزمة والمضخة والمكونات الأخرى.

تركيب القنطرة أو الخزانة

لتشغيل الغاسلة بشكل آمن وسليم، يجب توفير الحد الأدنى من المساحات بالنسبة إلى ما يلي:

الجوانب — ٢٥ مم　　الجانب الخلفي — ٥١ مم

الجانب العلوي — ٢٥ مم　　الجانب الأمامي — ٤٦٥ مم

في حالة تركيب الغسالة والمجفف معاً، يجب أن يكون بالجانب العلوي للقنطرة أو الخزانة فتحة هواء خالية قدرها ٤٦٥ مم على الأقل. لا تتطلب الغسالة وحدها فتحة هواء بعينها.

تركيب الغسالة

الخطوة رقم ١

اختيار مكان الغسالة

قبل تركيب الغسالة، تأكد من توفر ما يلي في المكان الذي قمت باختياره.

- سطح صلب ومستوي دون وجود سجاد أو بلاط قد يعوق عملية التهوية
- مكان بعيد عن أشعة الشمس المباشرة
- تتوفر به تهوية كافية
- لا يصل إلى مرحلة التجمد (تحت ٣٢ درجة فهرنهايت أو ٠ درجة مئوية)
- تكون بعيدة عن مصادر الحرارة مثل البترول أو الغاز
- تتوفر به مساحة كافية حتى لا يتم وضع الغسالة على سلك الطاقة

WF8804LP-02990C_AR□.indd 15　　2011/5/28 22:00:44

إعداد الغسالة

الخطوة رقم ٢

إزالة مسامير الشحن

قبل تثبيت الغسالة , يجب إزالة جميع مسامير الشحن من الجزء الخلفي للوحدة.

١. أرخ جميع المسامير بواسطة مفتاح الربط المرفق مع الجهاز.

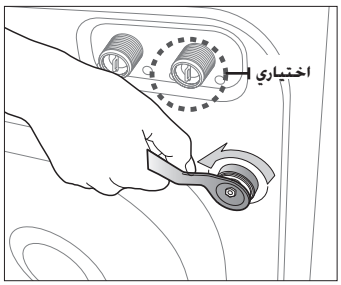

٢. أمسك الصواميل بواسطة مفتاح الربط واسحبها من خلال الجزء العريض للفتحة. كرر ذلك لإزالة كل مسمار.

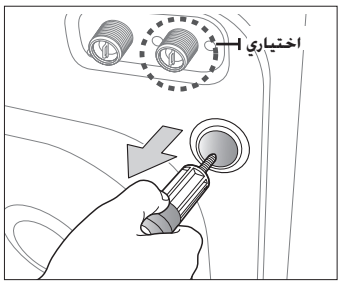

٣. سد جميع الفتحات باستخدام الأغطية البلاستيكية المرفقة مع الجهاز.

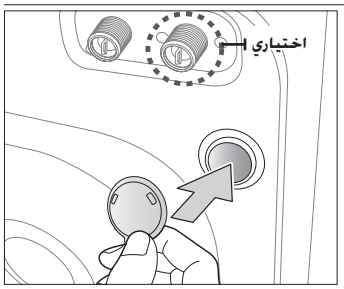

٤. قم بحفظ صواميل الشحن في مكان بعيد آمن لربما تحتاج إلى نقل الغسالة إلى مكان آخر في المستقبل.

⚠ تحذير

قد تشكل مواد التعبئة خطورة على الأطفال؛ لذلك احتفظ بكافة مواد التعبئة (الأكياس البلاستيكية والمواد المصنوعة من مادة البوليستيرين...الخ) بعيداً عن متناول الأطفال.

WF8804LP-02990C_AR□.indd 16 2011/5/28 22:00:44

الخطوة رقم ٣
ضبط استواء أرجل الغسالة

عند تركيب الغسالة، تأكد توصيل سلك الطاقة وخرطوم توريد الماء وخرطوم التصريف بسهولة.

١. ضع الغسالة في المكان المحدد.

٢. اجعل الغسالة مستوية عن طريق لف الأقدام المساوية إلى الداخل والخارج يدويًا كما هو مطلوب.

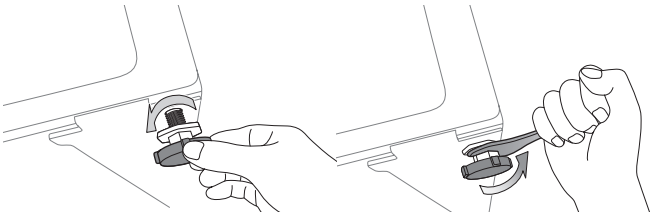

٣. عند استواء الغسالة، أحكم ربط الصماويل باستخدام مفتاح الربط المرفق مع الغسالة.

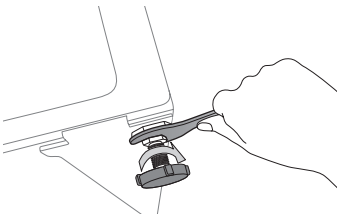

الخطوة رقم ٤
توصيل الماء والخرطوم

توصيل خرطوم توريد الماء

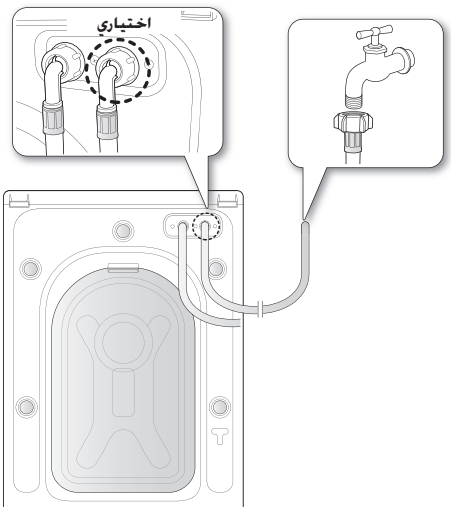

١. استخدم مثبت الذراع الذي على شكل حرف L الخاص بخرطوم توريد الماء البارد ووصله إلى مدخل توريد الماء البارد الموجود في الجانب الخلفي من الغسالة. أحكم ربطه يدويًا.

يجب توصيل أحد طرفي خرطوم توريد الماء بالغسالة وتوصيل الطرف الآخر للخرطوم بصنبور الماء. لا تشد خرطوم توريد الماء. إذا كان الخرطوم قصيراً للغاية، استبدله بخرطوم أطول عالي الضغط.

٢. صل الطرف الآخر لخرطوم توريد الماء البارد وأحكم تثبيته يدويًا. يمكنك، إذا لزم الأمر، إعادة توصيل خرطوم الماء بالغسالة من خلال إرخاء مثبت الخرطوم ولفه وإعادة ربطه بإحكام.

بالنسبة للطرازات المحددة المزودة بمدخل إضافي لتوريد الماء الساخن:

١. استخدم مثبت الذراع الذي على شكل L الأحمر الخاص بخرطوم توريد الماء الساخن ووصله إلى مدخل توريد الماء الساخن الموجود في الجانب الخلفي من الغسالة. أحكم ربطه يدويًا.
٢. صل الطرف الآخر لخرطوم توريد الماء الساخن بصنبور الماء الساخن وأحكم تثبيته يدويًا.
٣. استخدم قطعة على شكل حرف Y إذا أردت استخدام الماء البارد فقط.

WF8804LP-02990C_AR□.indd 17 2011/5/28 22:00:45

إعداد الغسالة

توصيل خرطوم توريد الماء (طرازات معينة)

١. إزالة المحول من خرطوم تزويد الماء.

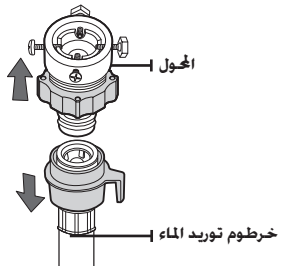

٢. أولاً، باستخدام مفك براغي من نوع "+"، أرخ المسامير الأربعة الموجودة بالمحول. ثم أخرج المحول واجعل الجزء (٢) باتجاه السهم حتى تتواجد مسافة مقدارها ٥ مم بينهما.

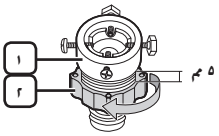

٣. قم بتوصيل المحول بصنبور الماء عن طريق ربط المسامير بإحكام مع ترك المحول يتدلى إلى أسفل. اجعل الجزء (٢) باتجاه السهم ووصل (١) و (٢).

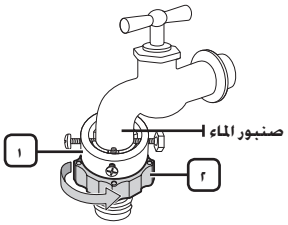

٤. صل خرطوم توريد الماء بالمحول. عند إرخاء الجزء (٣)، يتصل الخرطوم بالمحول تلقائياً محدثاً صوت "إغلاق".

بعد توصيل خرطوم توريد الماء بالمحول، تأكد من توصيله بشكل صحيح عن طريق سحب خرطوم توريد الماء لأسفل.

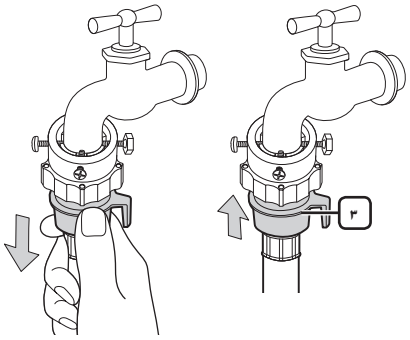

٥. صل الطرف الآخر من خرطوم توريد الماء بصمام دخول الماء الموجود بالجانب الخلفي من الغسالة. لف خرطوم توريد الماء في اتجاه عقارب الساعة.

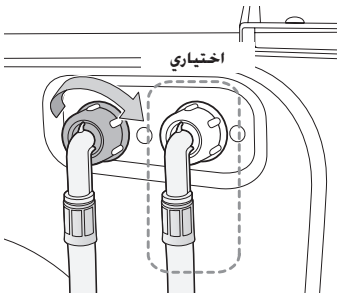

WF8804LP-02990C_AR□.indd 18 2011/5/28 22:00:46

٦. قم بتشغيل مصدر توريد الماء وتأكد من عدم وجود تسريبات من صمام الماء أو الصنبور أو المحول. قم بتكرار الخطوات السابقة، في حالة تسريب الماء.

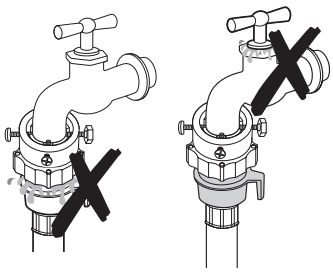

تحذير ⚠ لا تستخدم الغسالة في حالة تسريب الماء، فقد يتسبب ذلك في حدوث صعقة كهربائية أو إصابة جسدية.

- إذا كان صنبور الماء من نوع برغي، صل خرطوم توريد الماء إلى الصنبور كما هو مبين.

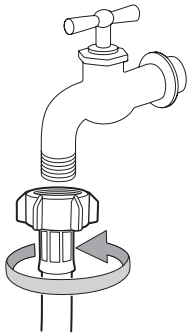

استخدم صنبور من النوع العادي لتوريد الماء. إذا كان الصنبور مربعاً أو كبيراً جداً، أزل الحلقة الفاصلة قبل إدخال الصنبور في المحول.

توصيل Aqua Hose (الخرطوم المائي) (طرازات محددة)

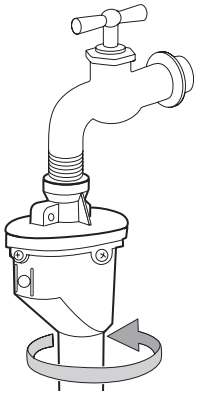

تم ابتكار Aqua Hose (الخرطوم المائي) لتوفير للحماية المثلى من التسرب.
يتم توصيله بخرطوم إمداد الماء ويقطع الماء أوتوماتيكياً في حال تلف الخرطوم. يعرض كذلك مؤشر تحذيري.

- قم بتوصيل خرطوم إمداد الماء بالصنبور كما هو موضح.

WF8804LP-02990C_AR□.indd 19 2011/5/28 22:00:46

إعداد الغسالة

توصيل خرطوم التصريف

يمكنك وضع نهاية خرطوم التصريف بثلاث طرق:

١. **فوق حافة حوض الغسيل:** يجب وضع خرطوم التصريف على ارتفاع يتراوح بين ٦٠ و ٩٠ سم. للإبقاء على انثناء خرطوم التصريف. استخدم سناد الخرطوم البلاستيكي المرفق. ثبت السناد على الجدار بواسطة خطاف أو ثبته في الصنبور بواسطة سلك أو حبل لمنع سقوط خرطوم التصريف على الأرض.

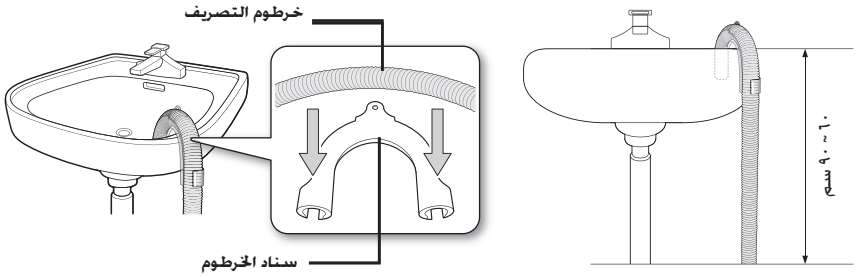

٢. **في فرع أنبوب تصريف الحوض:** يجب أن يكون فرع أنبوب التصريف فوق سباكة الحوض بحيث يكون طرف الخرطوم على ارتفاع ٦٠ سم على الأقل عن الأرض.

٣. **في أنبوب تصريف:** توصي Samsung باستخدام أنبوب عمودي على ارتفاع ٦٥ سم؛ على ألا يقل طوله عن ٦٠ سم ولا يزيد عن ٩٠ سم.

يتطلب خرطوم تصريف الماسورة الرأسية؛

- بحد أدنى لقطر الدائرة ٥ سم.
- الحد الأدنى لسعة الجرف ٦٠ متر في الدقيقة.

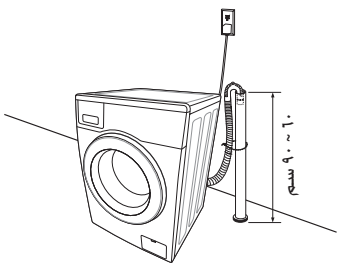

الخطوة رقم ٥

تشغيل الغسالة

قم بتوصيل سلك الطاقة بمقبس حائط معتمد كمخرج تيار كهربائي بقدرة من ٢٢٠ - ٢٤٠ فولط تيار متردد /٥٠ هرتز محمي بمنصهر أو قاطع دائرة. (لمزيد من المعلومات حول متطلبات التوصيل الكهربائي والتوصيل الأرضي، راجع صفحة رقم ١٤.)

WF8804LP-02990C_AR□.indd 20 2011/5/28 22:00:47

غسيل الملابس

مع الغسالة الجديدة من Samsung، يقوم الجزء الأكثر صلابة بتحديد الكمية التي يجب غسلها أولاً.

الغسيل للمرة الأولى

قبل غسيل الملابس للمرة الأولى، يجب تشغيل الجهاز دورة كاملة (أي بدون ملابس).

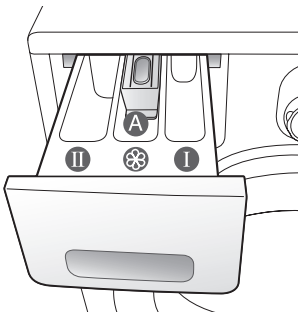

١. اضغط على الزر **Power (طاقة)**.
٢. أضف كمية قليلة من مسحوق الغسيل في الجزء المخصص له Ⅱ في درج مسحوق الغسيل.
٣. قم بتوريد الماء إلى الغسالة.
٤. اضغط على الزر **Start/Pause (تشغيل/إيقاف)**.

يزيل ذلك أي ماء متبقي في الغسالة نتيجة للتشغيل الاختباري الذي قامت به الشركة المصنعة للجهاز.

حجيرة Ⅰ : مسحوق للغسيل الأولي أو النشا.

حجيرة Ⅱ : مسحول الغسيل لدورة الغسيل الرئيسية ومواد تنقيه الماء ومواد ما قبل النقع ومادة التبييض ومواد إزالة البقع.

حجيرة ❀ : المواد الإضافية، مثل مكون أو منعم الأقمشة (لا تتجاوز الحافة السلفية (الحد الأقصى) لـ "A").

إرشادات أساسية

١. قم بوضع الملابس في الغسالة.

لا تتجاوز الحمل المحدد للغسالة. لتحديد سعة الحمل لنوع الغسيل الذي ترغب في غسيله، راجع الجدول الموجود في صفحة رقم ٢٧.
تحذير

- تأكد من عدم تعلق الغسيل بالباب، فقد يؤدي ذلك إلى تسرب الماء.
- قد يتبقى مسحوق الغسيل في الجزء المطاطي الأمامي للغسالة بعد دورة الغسيل. قم بإزالة أي مسحوق متبقي، لأن ذلك قد يسبب تسرب الماء.
- لا تقم بغسل العناصر العازلة للماء.

٢. أغلق الباب حتى يثبت.
٣. قم بتشغيل الغسالة.
٤. قم بإضافة المسحوق والمواد الإضافية إلى درج التوزيع.
٥. حدد الدورة والخيارات المناسبة لكمية الغسيل التي تم إضافتها.
سيضيء مؤشر الغسيل وسيظهر وقت الدورة المحدد على الشاشة.
٦. اضغط على الزر **Start/Pause (تشغيل/إيقاف)**

WF8804LP-02990C_AR□.indd 21 2011/5/28 22:00:48

غسيل الملابس

استخدام لوحة التحكم

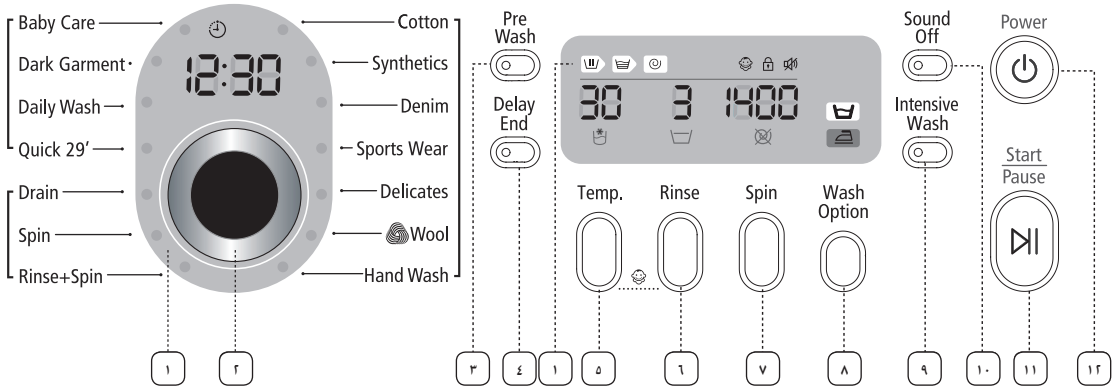

١ **لوحة العرض الرسومية الرقمية**	تعرض الوقت المتبقي لدورة الغسيل وكافة المعلومات الخاصة بالدورة ورسائل الخطأ.
٢ **قرص تحديد الدورة**	اختيار نوع التدوير وسرعة التجفيف للدورة. لمزيد من المعلومات، راجع "غسيل الملابس باستخدام قرص اختيار الدورة". (صفحة ٢١). **Cotton (قطن)** - للملابس القطنية خفيفة أو متوسطة الاتساخ وأغطية السرير ومفارش المائدة والملابس الداخلية والمناشف والقمصان، الخ **Synthetics (اصطناعي)** - البلوزات والقمصان متوسطة أو خفيفة الاتساخ وغيرها من الملابس المصنوعة من البوليستر (الديولين والتريفيرا) ومادة البوليامايد (البيرلون والنيلون) أو الأنسجة الصناعية الأخرى. **Denim (الجينز)** - يضمن وجود مستوى ماء أعلى في دورة الغسيل الأساسية والشطف الإضافي عدم وجود أي بقايا من مسحوق الغسيل في ملابسك. **Sports Wear (ملابس رياضية)** - الملابس المقاومة للماء أو ذات الطبقة العازلة للمحافظة على نظافة وجمال مظهرها. **Delicates (أنسجة رقيقة)** - الأقمشة الخفيفة وحمالات الصدر والملابس النسائية والفساتين والقمصان والبلوزات. للحصول على أفضل النتائج، استخدم مسحوق سائل. **Wool (صوف)** - تستخدم هذه الدورة لغسيل الملابس الصوفية التي يسمح بوضعها في الغسالة فقط. يجب أن تقل الحمولة عن ٢,٠ كجم. تم اعتماد دورة غسل الملابس الصوفية في هذه الغسالة من قبل Woolmark لغسيل منتجات Woolmark التي يمكن وضعها في الغسالة شريطة أن يتم غسل المنتجات وفقاً للتعليمات الموجودة على الملصق الموجود على الملابس والتعليمات الصادرة من الشركة المصنعة لهذه الغسالة. M0815 لمجموعة *****WF87 و M0814 لمجموعة *****WF88 (رقم الشهادة الصادرة عن شركة IWS NOM INEE المحدودة) **Handwash (غسيل يدوي)** - دورة غسيل بسيطة كما لو كنت تغسل الملابس باليدين. **Baby Care (عناية بملابس الأطفال)** - تضمن درجات الحرارة العالية للغسيل ودورات الشطف الإضافية عدم وجود بقايا لمسحوق الغسيل في الملابس رفيعة السمك. **Dark Garment (الملابس الغامقة)** - مزيد من عمليات الشطف وتقليل الدوران لضمان غسيل الملابس الغامقة المفضلة بشكل لطيف وشطفها جيداً. **Daily Wash (غسيل يومي)** - للملابس التي تستخدم يوميًا مثل الملابس التحتية والقمصان. **Quick 29' (29' سريع)** - للملابس خفيفة الاتساخ التي تحتاجها بسرعة. **Drain (تصريف)** - تصريف الماء من الغسالة دون تجفيف. **Spin (تجفيف)** - إجراء دورة تجفيف إضافية لإزالة المزيد من الماء. **Rinse + Spin (شطف + تجفيف)** - للغسيل الذي يحتاج إلى الشطف فقط أو لإضافة منعم الأقمشة الذي يتم إضافته أثناء الشطف فقط.

WF8804LP-02990C_AR□.indd 22 2011/5/28 22:00:48

٣ زر تحديد PREWASH (غسيل أولي)	اضغط على هذا الزر لتحديد غسيل أولي. وتتاح خاصية Pre-wash (الغسيل الأولي) مع الدورات التالية فقط: Cotton (قطن) و Synthetics (اصطناعي) و Denim (الجينز) و Sports Wear (ملابس رياضية) و Baby Care (عناية بملابس الأطفال) و Dark Garment (الملابس الغامقة) و Daily Wash (غسيل يومي).
٤ زر تحديد DELAY END (تأجيل الإنهاء)	اضغط الزر بشكل متكرر للاختيار من بين خيارات خاصية Delay End (تأجيل الإنهاء) المتوفرة (من ساعة ٣ إلى ١٩ ساعة بواقع ساعة واحدة). تشير الساعة المعروضة إلى وقت انتهاء دورة الغسيل.
٥ زر تحديد TEMPERATURE (درجة الحرارة)	اضغط على هذا الزر بشكل متكرر للاختيار من بين خيارات درجة حرارة الماء المتوفرة: (ماء بارد و ٣٠° مئوية و ٤٠° مئوية و ٦٠° مئوية و ٩٥° مئوية).
٦ زر تحديد RINSE (شطف)	اضغط على هذا الزر لإضافة دورات شطف إضافية. الحد الأقصى لعدد دورات الشطف هو خمسة.
٧ زر تحديد SPIN (تجفيف)	اضغط على هذا الزر بشكل متكرر للاختيار من بين سرعات دورة التجفيف المتوفرة. WF8804 / WF8704: و و ٤٠٠ و ٨٠٠ و ١٢٠٠ و ١٤٠٠ لفة في الدقيقة WF8802 / WF8702: و و ٤٠٠ و ٨٠٠ و ١٠٠٠ و ١٢٠٠ لفة في الدقيقة WF8800 / WF8700: و و ٤٠٠ و ٦٠٠ و ٨٠٠ و ١٠٠٠ لفة في الدقيقة "No spin (بدون تجفيف)" - يبقى الغسيل في الحاوية دون تشغيل دورة التجفيف بعد تصريف الماء الأخير. "Rinse Hold (إيقاف الشطف)" - يبقى الغسيل منقوعاً بالماء في عملية الشطف الأخيرة. يجب تشغيل دورة Drain "التصريف" أو Spin "التجفيف"، قبل إخراج الملابس من الغسالة.
٨ زر تحديد WASH (غسيل)	اضغط على هذا الزر بشكل متكرر للتبديل بين خيارات الغسيل: Easy Iron (كوي سهل) ← Soak (نقع) ← Easy Iron + Soak (كوي سهل + نقع) ← إيقاف تشغيل "Easy Iron (كوي سهل)": استخدم هذا الخيار لتحضير الغسيل بحيث يمكن كويه بسهولة. "Soak (نقع)": استخدم هذا الخيار لإزالة البقع من الغسيل بفعالية عن طريق نقعه. • يتم إجراء وظيفة النقع لمدة ١٣ دقيقة في دورة الغسيل. • تستمر وظيفة النقع لمدة ٣٠ دقيقة من خلال ست دورات، حيث تعمل دورة النقع التي تعمل بالدورات لمدة دقيقة واحدة ثم تقف لمدة ٤ دقائق. • تتاح وظيفة النقع مع برامج الغسيل التالية فقط: Cotton (قطن) و Synthetics (اصطناعي) و Denim (الجينز) و Sports Wear (ملابس رياضية) و Baby Care (عناية بملابس الأطفال) و Dark Garment (الملابس الغامقة) و Daily Wash (غسيل يومي).
٩ زر تحديد INTENSIVE WASH (غسيل مكثف)	اضغط على هذا الزر مع الملابس المتسخة بشدة والتي تحتاج إلى الغسيل بكثافة. يتم زيادة مدة الدورة لكل الدورات
١٠ زر SOUND OFF (إيقاف تشغيل الصوت)	يمكن إيقاف تشغيل الصوت لكافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات. • عند تشغيل وظيفة "إيقاف تشغيل الصوت"، يتم إضاءة مصباح زر Sound Off (إيقاف تشغيل الصوت) ولوحة التحكم. • عند إيقاف تشغيل وظيفة Sound off (إيقاف تشغيل الصوت)، يصدر صوت جرس وينطفئ مصباح الزر ولوحة التحكم.
١١ زر تحديد START/PAUSE (تشغيل/إيقاف)	اضغط على هذا الزر لإيقاف الدورة مؤقتاً وإعادة تشغيلها.
١٢ الزر POWER (طاقة)	اضغط على هذا الزر مرة لتشغيل الغسالة، واضغط عليه مرة أخرى لإيقاف تشغيلها. في حالة عدم الضغط على أي من أزرار الغسالة لمدة تزيد عن ١٠ دقائق أثناء تشغيلها، يتم إيقاف تشغيلها تلقائيًا.

WF8804LP-02990C_AR□.indd 23 2011/5/28 22:00:49

غسيل الملابس

التأمين ضد عبث الأطفال

تمكّنك وظيفة Child Lock (التأمين ضد عبث الأطفال) من قفل الأزرار حتى لا يكون هناك إمكانية لتغيير دورة الغسيل التي قمت باختيارها.

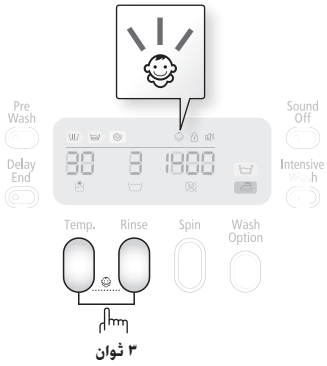

التشغيل/عدم التشغيل

إذا كنت ترغب في تشغيل وظيفة "تأمين ضد الأطفال" أو عدم تشغيلها، اضغط على الزرين .**Temp (درجة الحرارة)** و **Rinse (شطف)** في وقت واحد لمدة ٣ ثوان. ستضيء علامة "Child Lock (التأمين ضد عبث الأطفال)" عند تشغيل هذه الخاصية.

يعمل الزر **Power (طاقة)** فقط عند تشغيل وظيفة "التأمين ضد عبث الأطفال". يستمر تشغيل وظيفة "التأمين ضد عبث الأطفال" حتى بعد تشغيل الغسالة وإيقاف تشغيلها أو بعد فصل توصيل سلك التيار الكهربائي وإعادة توصيله.

إيقاف تشغيل الصوت

يمكن تحديد وظيفة Sound Off (إيقاف تشغيل الصوت) مع كافة الدورات. عند تحديد هذه الوظيفة، يتم إيقاف تشغيل الصوت لكافة الدورات، حتى في حالة تشغيل الطاقة أو إيقاف تشغيلها بشكل متكرر، لا يتغير في الإعداد الذي تم اختياره.

التشغيل/عدم التشغيل

إذا كنت تريد تشغيل وظيفة "إيقاف تشغيل الصوت" أو إيقاف تشغيلها، اضغط على الزر **Sound OFF (إيقاف تشغيل الصوت)**. سيضاء مصباح زر **Sound Off (إيقاف تشغيل الصوت)** ولوحة التحكم عند استخدام هذه الخاصية.

تأجيل الإنهاء

يمكنك ضبط الغسالة لإنهاء عملية الغسيل تلقائياً في وقت لاحق، باختيار تأجيل وقت الإنهاء بين ٣ و ١٩ ساعة. (بواقع زيادة ساعة واحدة. تشير الساعة المعروضة إلى الوقت الذي سيتم الانتهاء فيه من الغسيل.

١. يمكنك ضبط الغسالة تلقائياً أو يدوياً حسب نوع الملابس التي تريد غسلها.
٢. اضغط على الزر **Delay End (تأجيل الإنهاء)** بشكل متكرر حتى تصل إلى وقت التأجيل المطلوب.
٣. اضغط على الزر **Start/Pause (تشغيل/إيقاف)**. سيضيء مؤشر "**Delay End (تأجيل الإنهاء)**" وتبدأ الساعة بالعد التنازلي حتى تصل إلى الوقت المحدد.
٤. لإلغاء وظيفة Delay End (تأجيل الإنهاء)، اضغط على الزر **Power (طاقة)** ثم تشغيل الغسالة مرة أخرى.

WF8804LP-02990C_AR□.indd 24 2011/5/28 22:00:50

غسيل الملابس باستخدام قرص تحديد الدورة

تسهل الغسالة الجديدة من عملية غسل الملابس. باستخدام نظام "التحكم الذكي" الأوتوماتيكي من Samsung. عند اختيار برنامج غسيل، تقوم الغسالة بضبط درجة الحرارة ووقت الغسيل وسرعات الغسيل المناسبة.

١. افتح صنبور الماء.
٢. اضغط على الزر **Power (طاقة)**.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل ومنعم القماش ومسحوق الغسيل الأولي (إذا لزم الأمر) في الحجيرات الخاصة به.

تتاح خاصية Pre-wash (غسيل أولي) عند تحديد الدورات: Cotton (قطن) و Synthetics (اصطناعي) و Denim (الجينز) و Sports Wear (ملابس رياضية) و Baby Care (عناية بملابس الأطفال) و Dark Garment (الملابس الغامقة) و Daily Wash (غسيل يومي). ويعد الغسيل الأولي ضرورياً فقط في حالة الاتساخ الشديد للملابس.

٧. استخدم **قرص تحديد الدورة** لتحديد الدورة المناسبة وفقاً لنوع المادة: Cotton (قطن) و Synthetics (اصطناعي) و Denim (الجينز) و Sports Wear (ملابس رياضية) و Delicates (أنسجة رقيقة) و Wool (صوف) و Hand Wash (غسيل يدوي) و Baby Care (عناية بملابس الأطفال) و Dark Garment (الملابس الغامقة) و Daily Wash (غسيل يومي) و 'Quick 29 ('29 سريع). ستضاء المؤشرات المرتبطة على لوحة التحكم.
٨. في هذا الوقت، يمكنك التحكم في درجة حرارة الغسيل وحجم الشطف وسرعة التجفيف ووقت التأجيل بالضغط على زر الخيار المناسب.
٩. اضغط على الزر **Start/Pause (تشغيل/إيقاف)** وعندها تبدأ الغسالة في العمل. يضيء مؤشر العملية ويظهر الوقت المتبقي للدورة على الشاشة.

خيار إيقاف

من الممكن إضافة/إزالة قطع غسيل في غضون ٥ دقائق من بدء الغسيل.

١. اضغط على الزر **Start/Pause (تشغيل/إيقاف)** لإلغاء قفل الباب.

لا يمكن فتح الباب عندما تكون درجة حرارة الماء عالية جداً أو مستوى الماء عالي جداً.

٢. اضغط على الزر **Start/Pause (تشغيل/إيقاف)** لإعادة تشغيل الغسالة.

عند انتهاء الدورة:

بعد انتهاء دورة الغسيل بالكامل، سيتم إيقاف الغسالة تلقائيًا.

١. افتح الباب.
٢. أخرج الملابس.

WF8804LP-02990C_AR□.indd 25 2011/5/28 22:00:51

غسيل الملابس

غسيل الملابس يدوياً

يمكنك غسل الملابس يدوياً دون استخدام قرص تحديد الدورة.

١. قم بتشغيل مصدر توريد الماء.
٢. اضغط على الزر **Power (طاقة)** الموجود في الغسالة.
٣. افتح الباب.
٤. ضع الملابس قطعة بقطعة في الحاوية دون تجاوز سعتها.
٥. أغلق الباب.
٦. أضف مسحوق الغسيل. وإذا لزم الأمر، أضف منعم الأقمشة أو مسحوق الغسيل الأولي في الحجيرات المناسبة.
٧. اضغط على الزر .**Temp (درجة الحرارة)** لتحديد درجة الحرارة المطلوبة. (ماء بارد و ٣٠° مئوية و ٤٠° مئوية و ٦٠° مئوية و ٩٥° مئوية)
٨. اضغط على الزر **Rinse (شطف)** لتحديد العدد المطلوب لدورات الشطف.
الحد الأقصى لعدد دورات الشطف هو خمسة.
يتم زيادة مدة الغسيل وفقاً لعدد الدورات.
٩. اضغط على الزر **Spin (تجفيف)** لتحديد سرعة التنشيف.
تسمح لك وظيفة إيقاف الشطف بإخراج الملابس التي لا تزال مبتلة من الغسالة. (⊗ : بدون تجفيف، /‾\ : إيقاف الشطف)
١٠. اضغط على الزر **Delay End (تأجيل الإنهاء)** بشكل متكرر للتبديل بين خيارات "تأجيل الإنهاء" المتوفرة (بين ٣ و ١٩ ساعة بإمكانية زيادة ساعة) تشير الساعة المعروضة إلى الوقت الذي سيتم الانتهاء فيه من الغسيل.
١١. اضغط على الزر **Start/Pause (تشغيل/إيقاف)** وعندها تبدأ الغسالة بالتجفيف.

تعليمات الغسيل

اتبع هذه التعليمات البسيطة للحصول على غسيل أكثر نظافة وأكثر فاعلية.

قم بفحص بطاقة العناية الموجودة على الملابس دوماً قبل الغسيل.

افرز الملابس واغسلها وفقاً للمعايير التالية:

- بطاقة العناية: افرز الملابس إلى أقطان وألياف مخلوطة وأقمشة صناعية وملابس حريرية وأصواف ورايون.
- اللون: قسم الملابس إلى ملابس بيضاء وملابس ملونة. اغسل الملابس الجديدة الملونة كل على حدة.
- الحجم: يعمل وضع الملابس بمختلف أحجامها في مرة واحدة على تحسين عملية الغسيل.
- رقة الملمس: اغسل الملابس الرقيقة كل على حدة. باستخدام الدورة أنسجة رقيقة للحصول على ملابس صوفية وستائر وملابس حريرية نقية وتبدو جديدة. افحص العلامات الموجودة بالملابس التي تريد غسلها أو راجع جدول العناية بالأقمشة في الملحق.

تفريغ الجيوب

قم بتفريغ كافة جيوب الملابس قبل كل عملية غسيل. حيث يمكن أن تتسبب الأشياء الصغيرة، والصلبة ذات الأشكال غير المنتظمة مثل العملات المعدنية، والشفرات، والدبابيس، وماسكات الورق في تلف الغسالة. لا تقم بغسيل الملابس المزودة بإبزيمات أو أزرار كبيرة الحجم أو الأشياء المعدنية الأخرى ثقيلة الوزن.

قد تتسبب المعادن المستخدمة في الملابس في تلفها وتلف الحوض. اقلب الملابس المزينة بالأزرار والمطرزة على ظهرها قبل غسلها. إذا تركت سوست السراويل والجواكت مفتوحة أثناء الغسيل، فإن هذا قد يتسبب في تلف سلة التجفيف. يجب غلق السوست وتثبيتها بخيط قبل الغسيل.

قد تتشابك الملابس ذات الخيوط الطويلة مع ملابس أخرى وقد يؤدي ذلك إلى تلف هذه الملابس. احرص على تثبيت الخيوط قبل بدء الغسيل.

الغسيل الأولي للملابس القطنية

تقدم لك الغسالة الجديدة باستخدام مساحيق الغسيل الحديثة، أفضل نتائج الغسيل، ومن ثم فهي تساعدك على توفير الطاقة الكهربائية والوقت والماء والمسحوق. لكن إذا كانت الملابس القطنية شديدة الاتساخ، استخدم الغسيل الأولي مع مسحوق الغسيل الذي يحتوي على البروتين.

WF8804LP-02990C_AR□.indd 26 2011/5/28 22:00:51

تحديد سعة حمل الملابس

لا تتجاوز حمل الغسيل المحدد للغسالة حيث يؤدي ذلك إلى الحصول على نتائج غير مرضية. استخدم الجدول التالي لتحديد سعة الحمل لنوع الغسيل الذي تقوم بغسله.

نوع القماش	سعة الحمل	
الطراز	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700
Cotton (قطن) - متوسط/خفيف الاتساخ - شديدة الاتساخ	٨,٠ كجم	٧,٠ كجم
Synthetics (اصطناعي)	٣,٠ كجم	٣,٠ كجم
Denim (الجينز)	٣,٠ كجم	٣,٠ كجم
Sports Wear (ملابس رياضية)	٢,٥ كجم	٢,٥ كجم
Delicates (أنسجة رقيقة)	٢,٥ كجم	٢,٥ كجم
Wool (صوف)	٢,٠ كجم	٢,٠ كجم

- في حالة عدم توزان الغسيل ("UE" يضاء المصباح على الشاشة), وفي هذه الحالة, أعد توزيع الغسيل. حيث يؤدي عدم توزان الغسيل إلى تقليل فعالية دورة التجفيف.
- عند غسيل المفارش أو الألحفة, قد تطول مدة الغسيل أو تقل فعالية عملية التجفيف.
- بالنسبة إلى المفارش أو الألحفة, يوصى بأن تكون الحمولة ١,٨ (كجم) أو أقل.

تأكد من إدخال حمالات الصدر (التي يمكن غسلها في الماء) في شبكة غسيل (التي يتم شراؤها بشكل منفصل).

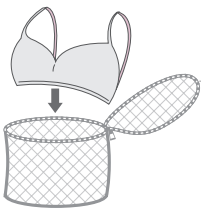

- قد تنكسر الأجزاء المعدنية الموجودة في حمالات الصدر مما قد يؤدي إلى تلف الغسيل. لذا يجب عليك أن تتأكد من وضعهم داخل شبكة غسيل جيدة.
- قد تتعلق الملابس الصغيرة والخفيفة بالباب الجوارب والقفازات والمنسوجات والمناديل. لذا قم بوضعهم داخل شبكة غسيل جيدة.

تنبيه

لا تقم بغسل شبكة الغسيل وحدها دون وجود ملابس بها. فقد يؤدي ذلك إلى حدوث اهتزازات غير طبيعية في الغسالة مما قد يتسبب في حدوث إصابات.

WF8804LP-02990C_AR□.indd 27 2011/5/28 22:00:51

غسيل الملابس

معلومات حول مسحوق الغسيل والمواد الإضافية

ما هو مسحوق الغسيل الذي يمكنك استخدامه

يعتمد نوع مسحوق الغسيل الذي تستخدمه على نوع القماش (القطن أو الألياف الصناعية أو الملابس الرقيقة أو الصوف)، والألوان ودرجة حرارة الماء ودرجة الاتساخ. استخدم دوماً مسحوق الغسيل ذي "الرغوة القليلة" والذي صمم خصيصاً للغسالات الأوتوماتيكية. اتبع توصيات الشركة المصنعة لمسحوق الغسيل وفقًا لوزن الملابس ودرجة الاتساخ ودرجة نقاء الماء في منطقتك. إذا لم تكن تعرف ما إذا كان الماء نقيًا أم لا في منطقتك، اتصل بالهيئة المسؤولة عن الماء.

لا تستخدم منظف صلب أو خشن لأنه قد يتبقى في دورة الشطف لأن ذلك قد يتسبب في أداء الغسالة لدورة الشطف بشكل غير صحيح.أو يتسبب في إعاقة تدفق الماء.

الرجاء الانتباه إلى الأمور التالية عند استخدام دورة الملابس الصوفية.

- استخدم منظف سائل معتدل مخصص للملابس الصوفية فقط.
- عند استخدام منظف مسحوق، فقد يبقى على الملابس ويسبب التلف للمادة (الملابس الصوفية).

درج مسحوق الغسيل

تحتوي الغسالة على حجيرات منفصلة لتوزيع المسحوق ومنعم الأقمشة. قم بإضافة كافة المواد الإضافية الخاصة بالغسيل إلى الحجيرة المناسبة قبل بدء تشغيل الغسالة.

لا تقم بفتح درج المسحوق أثناء تشغيل الغسالة.

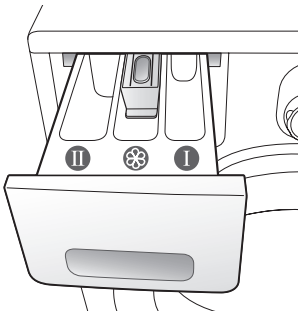

١. اسحب درج مسحوق الغسيل الموجود على الجانب الأيمن من لوحة التحكم.
٢. قم بإضافة كمية من مسحوق الغسيل الموصى به مباشرة في حجيرة المسحوق Ⅱ قبل تشغيل الغسالة.
٣. قم بإضافة الكمية الموصى بها من منعم الأقمشة في الحجيرة الخاصة به ❀ إذا لزم الأمر.

⚠ تنبيه
لا تقم بإضافة أي منظف مسحوق/سائل إلى حجيرة المنعّم ❀.

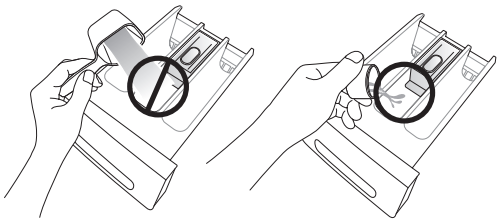

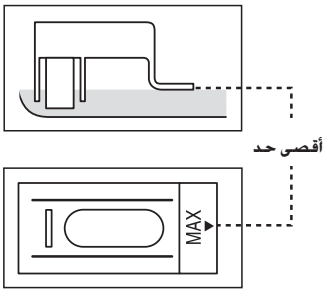

٤. عند استخدام خيار "غسيل أولي"، قم بإضافة الكمية الموصى بها من مسحوق الغسيل في حجيرة "الغسيل الأولي" Ⅰ.

لا تستخدم أنواع المساحيق التالية عند غسيل الملابس كبيرة الحجم.

- مساحيق غسيل التي تكون على شكل ألواح أو أقراص
- مساحيق التي تكون على شكل كرة أو شبكة

يجب إذابة منعم الأقمشة المركز أو السميك بقليل من الماء قبل صبه في درج التوزيع (لمنع إعاقة تدفق الماء.)

تجنب عدم تدفق منعّم الأقمشة عند غلق درج المنظف بعد إضافة منعّم الأقمشة بداخل حجيرة مسحوق الشطف.

WF8804LP-02990C_AR□.indd 28 2011/5/28 22:00:51

تنظيف الغسالة وصيانتها

يعمل حفظ الغسالة نظيفة على تحسين أدائها، وتجنب الإصلاحات غير الضرورية، وزيادة عمر الغسالة.

تصريف الماء من الغسالة عند الطوارئ

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. افتح غطاء المصفاة باستخدام عملة معدنية أو مفتاح.

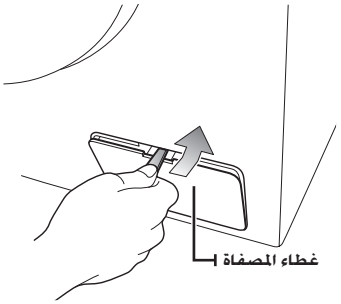

٣. فُك غطاء التصريف عند الطوارئ عن طريق لفه لليسار.

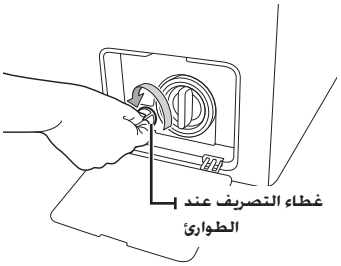

٤. أمسك الغطاء من نهاية أنبوب التصريف عند الطوارئ واجذبه ببطء مسافة حوالي ١٥ سم.
٥. اسمح بتصريف الماء بأكمله ليتدفق في وعاء.

قد توجد مياه متبقية أكثر مما توقعت. قم بتجهيز وعاء أكبر.

٦. أعد إدخال أنبوب التصريف وثبت الغطاء مرة أخرى.
٧. أعد غطاء المصفاة إلى مكانه.

تنظيف الأسطح

١. امسح الأسطح الخارجية لجهاز الغسالة، بما في ذلك لوحة التحكم بقطعة من القماش الناعم ومسحوق تنظيف منزلي غير خادش.
٢. استخدم قطعة من القماش الناعم لتجفيف الأسطح الخارجية.
٣. لا تصب الماء على الغسالة.

WF8804LP-02990C_AR□.indd 29 2011/5/28 22:00:52

تنظيف الغسالة وصيانتها

تنظيف درج مسحوق الغسيل والجزء المرتد منه

١. اضغط ذراع الإرخاء الموجودة في داخل درج مسحوق الغسيل واسحبه إلى الخارج.
٢. قم بإزالة الفاصل الخاص بسائل مسحوق الغسيل من درج مسحوق الغسيل

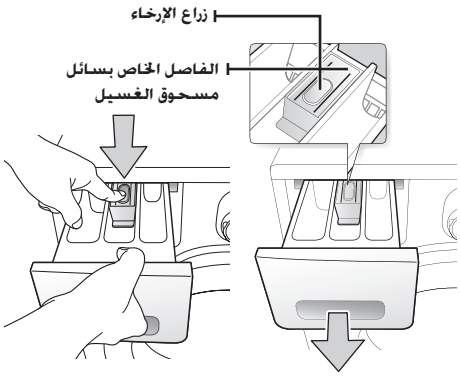

٣. اغسل كافة الأجزاء بالماء الجاري.

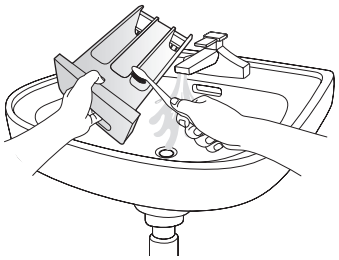

٤. نظف الجزء المرتد للدرج باستخدام فرشاة أسنان قديمة.
٥. ضع الفاصل الخاص بسائل مسحوق الغسيل في مكانه عن طريق دفعه بقوة في الدرج.
٦. أعد الدرج إلى مكانه.
٧. قم بتشغيل دورة الشطف دون وجود أي غسيل في الحاوية لإزالة أي مسحوق متبقي.

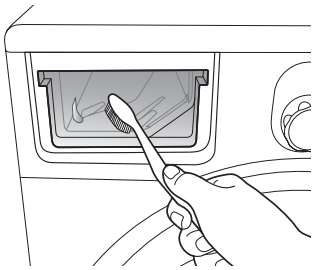

WF8804LP-02990C_AR□.indd 30 2011/5/28 22:00:52

تنظيف مصفاة المخلفات

توصي Samsung بتنظيف مصفاة المخلفات ٥ أو ٦ مرات في العام، أو عند عرض رسالة الخطأ "5E" (راجع "تصريف الغسالة عند الطوارئ" في الصفحة السابقة.)

تنبيه قبل تنظيف مرشح البقايا، تأكد من نزع قابس طاقة الجهاز.

١. قم بإزالة الماء المتبقي أولاً (قم بالرجوع إلى "تصريف الغسالة عند الطوارئ" في صفحة ٢٩).

إذا قمت بفصل المرشح دون تصريف الماء المتبقي، فقد يتساقط للخارج على شكل قطرات.

٢. افتح غطاء المصفاة باستخدام مفتاح أو قطعة معدنية.
٣. أرخ غطاء التصريف عند الطوارئ بلفه إلى اليسار لصرف الماء من الغسالة.
٤. أرخ غطاء مصفاة المخلفات.

٥. أغسل أية أوساخ أو مواد أخرى عالقة في مصفاة المخلفات. تأكد أن مروحة مضخة التصريف الموجودة خلف مصفاة المخلفات غير مسدودة.
٦. ضع غطاء مصفاة المخلفات في مكانه.
٧. ضع غطاء المصفاة في مكانه

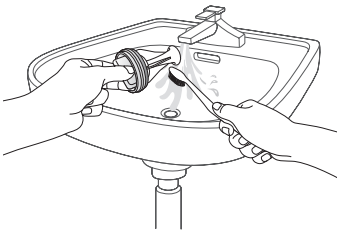

تنبيه لا تفتح غطاء مرشح البقايا أثناء تشغيل الغسالة أو خلال تدفق الماء الساخن للخارج.

- تأكد من إعادة وضع غطاء المرشح بعد تنظيف المرشح. إذا كان المرشح غير مركباً في الغسالة، فقد تصادف الغسالة الخاصة بك قصور بالأداء أو تسرب الماء.
- يجب تجميع المرشح تماماً بعد تنظيف المرشح.

تنظيف المصفاة الشبكية المتصلة بخرطوم الماء

يجب عليك تنظيف المصفاة الشبكية المتصلة بخرطوم الماء مرة كل عام على الأقل، أو عند ظهور رسالة خطأ "4E":

١. قم بإيقاف تشغيل مصدر توريد الماء إلى الغسالة.
٢. افصل الخرطوم عن الجانب الخلفي من الغسالة. قم بتغطية الخرطوم بقطعة من القماش، لمنع تدفق الماء بسبب الضغط العالي في الخرطوم.
٣. باستخدام زوج من الزرادية، اسحب المصفاة الشبكية إلى الخارج من طرف الخرطوم بلطف واشطفها بالماء حتى تصبح نظيفة. نظف كذلك الجزأين الداخلي والخارجي للوصلة الملفوفة.
٤. أعد المصفاة إلى مكانها.
٥. ثبت الخرطوم في الغسالة مرة أخرى.
٦. تأكد أن الوصلات محكمة ضد الماء وقم بتشغيل الصنبور.

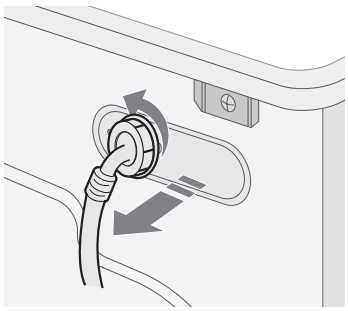

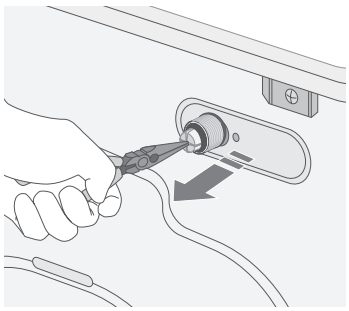

WF8804LP-02990C_AR□.indd 31 2011/5/28 22:00:53

تنظيف الغسالة وصيانتها

إصلاح جهاز غسالة متجمد

إذا انخفضت درجة الحرارة إلى أقل من درجة التجمد وتجمدت الغسالة:

١. افصل الغسالة من مصدر التيار الكهربائي.
٢. صب الماء الدافئ على صنبور الماء لإرخاء خرطوم توريد الماء.
٣. قم بإزالة خرطوم توريد الماء وانقعه في الماء الدافئ.
٤. صب الماء الدافئ في حاوية الغسالة واتركه لمدة ١٠ دقائق.
٥. أعد توصيل خرطوم توريد الماء إلى صنبور الماء وتأكد من أن توريد الماء والتصريف يجري كما ينبغي.

تخزين الغسالة

إذا كنت بحاجة إلى تخزين الغسالة لمدة طويلة، فمن المستحسن تصريف الماء منها وفصلها. يمكن أن تتلف الغسالة في حالة ترك ماء في الخراطيم والمكونات الداخلية قبل التخزين.

١. اختر الدورة Quick 29′ (29′ سريع) ثم قم بإضافة مادة تبييض في الحجيرة الخاصة بمادة التبييض. قم بتشغيل الغسالة من خلال الدورة دون وجود حمل بها.
٢. قم بإيقاف صنابير الماء وافصل خراطيم صنابير الماء.
٣. قم بفصل الغسالة من منفذ التيار الكهربائي. واترك باب الغسالة مفتوحًا للسماح بدخول الهواء داخل الحاوية.

في حالة قيامك بتخزين الغسالة في درجات حرارة تحت التجمد، اجعل هناك فرصة لامتصاص الماء المتبقي في الغسالة مع الوقت قبل استخدامها مرة أخرى.

WF8804LP-02990C_AR□.indd 32 2011/5/28 22:00:53

استكشاف المشاكل وحلها ورموز المعلومات

تحقق مما يلي إذا كانت الغسالة...

المشكلة	الحل
لا تعمل	• تأكد من توصيل قابس الغسالة بمصدر التيار الكهربائي. • تأكد من إغلاق الباب بإحكام. • تأكد من فتح صنبور (صنابير) الماء. • تأكد من الضغط على الزر Start/Pause (تشغيل/إيقاف).
عدم وجود ماء أو عدم وجود ماء كافي	• افتح الصنبور تماماً. • تأكد من أن خرطوم توريد الماء غير متجمد. • فك ثنيات الخراطيم الخاصة بمداخل. • نظف المصفاة الموجودة على الخرطوم الخاص بمدخل الماء.
يبقى مسحوق الغسيل في الدرج بعد اكتمال دورة الغسيل	• تأكد من تشغيل الغسالة بضغط ماء كاف. • تأكد من إضافة مسحوق الغسيل في منتصف درج المسحوق.
تهتز الغسالة أو تحدث صوتاً مرتفعاً	• تأكد من تركيب الغسالة على أرض مستوية. إذا كانت الأرض غير مستوية، اضبط قدم الغسالة حتى تستوي على الأرضية. • تأكد من إزالة مسامير الشحن. • تأكد من عدم ملامسة الغسالة لأي شيء آخر. • تأكد من توازن حمل الملابس الموجودة في الغسالة.
لا يتم التصريف من الغسالة و/أو لا تقوم بعملية التجفيف	• فك الثنيات الموجودة في خرطوم التصريف. قلل من استخدام الخراطيم الملتوية. • تأكد أن المصفاة الشبكية المتصلة بخرطوم الماء غير مسدودة.
الباب مغلق ولا يمكن فتحه	• تأكد من تصريف كل الماء في الوعاء الأسطواني الغسالة للخارج. • تأكد من أن ضوء قفل الباب منطفئ. سيتم انطفاء ضوء قفل الباب بعد عملية التصريف.

في حالة استمرار المشكلة، اتصل بمركز خدمة عملاء Samsung المحلي.

WF8804LP-02990C_AR□.indd 33 2011/5/28 22:00:53

استكشاف المشاكل وحلها ورموز المعلومات

رموز المعلومات

عندما تتعرض الغسالة للعطل، قد يظهر رمز معلومات على الشاشة. في حالة حدوث ذلك، الرجاء التحقق من هذا الجدول وتجربة الحلول المقترحة قبل الاتصال بخدمة العملاء.

رمز الكود	الحل
dE	• أغلق الباب.
4E	• تأكد من أن صنبور توريد الماء مفتوح. • تأكد من ضغط الماء.
5E	• نظّف المصفاة من المخلفات. • تأكد من تركيب خرطوم التصريف تركيبًا صحيحًا.
UE	• حمل الغسيل غير متوازن. قم بإعادة توزيع الحمل. في حالة غسيل قطعة واحدة من الملابس، مثل برنس حمام أو جينز، قد لا تكون نتيجة التجفيف النهائي مرضية، وتظهر رسالة خطأ "UE" في إطار العرض.
cE/3E	• اتصل بخدمة ما بعد البيع.
Sd/Sud	• تحدث هذه الحالة عند استشعار كمية كبيرة من الرغوة. ويتم كذلك عرضها عند التخلص من الرغوة. عند الانتهاء من عملية الإزالة، تتم متابعة الدورة الطبيعية (وبعد ذلك إحدى العمليات الطبيعية. هذا الخطأ يهدف إلى الحماية ضد العيوب غير القابلة للكشف عنها.)
Uc	• إذا كانت فلطية الطاقة المزودة غير مستقرة، فقد تتوقف الغسالة عن العمل مؤقتاً لحماية أجهزتها الكهربائية. • إذا كان يتم إمداد الفلطية الصحيحة للغسالة، فستعاود الدورة العمل أوتوماتيكياً.

بالنسبة للأكواد التي لم تذكر أعلاه، أو في حالة عدم مساهمة الحل المقترح في حل المشكلة، اتصل بمركز خدمة Samsung أو الموزع المحلي المعتمد التابع لـ Samsung.

WF8804LP-02990C_AR□.indd 34 2011/5/28 22:00:53

جدول الدورة

جدول الدورة

(●خيار المستخدم)

البرنامج	الحمل الأقصى (كجم)		مسحوق الغسيل			أقصى درجة حرارة (مئوية)
	WF8804/ WF8802/ WF8800	WF8704/ WF8702/ WF8700	الغسيل الأولي	غسيل	منعم الأقمشة	
Cotton (قطن)	٨,٠	٧,٠	●	نعم	●	٩٥
Synthetics (اصطناعي)	٣,٠	٣,٠	●	نعم	●	٦٠
Denim (الجينز)	٣,٠	٣,٠	●	نعم	●	٦٠
Sports Wear (ملابس رياضية)	٢,٥	٢,٥	●	نعم	●	٦٠
Delicates (أنسجة رقيقة)	٢,٥	٢,٥	-	نعم	-	٤٠
Wool (صوف)	٢,٠	٢,٠	-	نعم	-	٤٠
Handwash (غسيل يدوي)	٢,٠	٢,٠	-	نعم	●	٤٠
Baby Care (عناية بملابس الأطفال)	٤,٠	٣,٠	●	نعم	●	٩٥
Dark Garment (الملابس الغامقة)	٤,٠	٣,٠	●	نعم	●	٤٠
Daily Wash (غسيل يومي)	٤,٠	٣,٠	●	نعم	●	٦٠
Quick 29' (29' سريع)	٣,٠	٣,٠	-	نعم	●	٦٠

البرنامج	سرعة التجفيف (القصوى) دورة في الدقيقة			تأجيل الإنهاء	مدة الدورة (دقيقة)
	WF8804/ WF8704	WF8802/ WF8702	WF8800/ WF8700		
Cotton (قطن)	١٤٠٠	١٢٠٠	١٠٠٠	●	١٢٠
Synthetics (اصطناعي)	١٢٠٠	١٢٠٠	١٠٠٠	●	٨٤
Denim (الجينز)	٨٠٠	٨٠٠	٨٠٠	●	٧٣
Sports Wear (ملابس رياضية)	١٢٠٠	١٢٠٠	١٠٠٠	●	٦٥
Delicates (أنسجة رقيقة)	٨٠٠	٨٠٠	٨٠٠	●	٤٥
Wool (صوف)	٨٠٠	٨٠٠	٨٠٠	●	٣٧
Handwash (غسيل يدوي)	٤٠٠	٤٠٠	٤٠٠	●	٣٠
Baby Care (عناية بملابس الأطفال)	١٤٠٠	١٢٠٠	١٠٠٠	●	١٢٩
Dark Garment (الملابس الغامقة)	١٢٠٠	١٢٠٠	١٠٠٠	●	٧٠
Daily Wash (غسيل يومي)	١٢٠٠	١٢٠٠	١٠٠٠	●	٦٥
Quick 29' (29' سريع)	١٤٠٠	١٢٠٠	١٠٠٠	●	٢٩

١. تستغرق الدورة "غسيل أولي" مدة أطول بحوالي ١٥ دقيقة.
٢. تم قياس بيانات مدد الدورات وفقاً للظروف المنصوص عليها في مقياس IEC 60456 / EN 60456.
٣. قد يختلف الاستهلاك في كل منزل عن القيم المبينة في الجدول بسبب الاختلاف في ضغط الماء ودرجة الحرارة الخاصة بتوريد الماء وكمية الغسيل ونوعه.
٤. عند تحديد وظيفة غسيل مكثف، يتم زيادة مدة الدورة لكل الدورات.

WF8804LP-02990C_AR□.indd 35 2011/5/28 22:00:53

الملحق

جدول العناية بالأقمشة

توفر الرموز التالية تعليمات العناية بالملابس. تتضمن بطاقات العناية أربعة رموز على النحو التالي: غسيل، تبييض، تجفيف، وكي، وتنظيف جاف إذا لزم الأمر.
يضمن استخدام هذه الرموز التناسق بين الشركات المصنعة للملابس المحلية والمستوردة. اتبع تعليمات بطاقة العناية لزيادة عمر الملابس وتقليل مشاكل الغسيل.

مواد مقاومة		يمكن الكي عند ١٠٠°م بحد أقصى	
أقمشة رقيقة		يحظر الكي	
يمكن الغسيل عند ٩٥ درجة مئوية	95 95	يمكن استخدام التنظيف الجاف باستخدام أي مواد مذيبة	(A)
يمكن الغسيل عند ٦٠ درجة مئوية	60 60	التنظيف الجاف بالبروكلوريد أو الوقود المخفف أو الكحول النقي أو R113 فقط	(P)
يمكن الغسيل عند ٤٠ درجة مئوية	40 40	التنظيف الجاف بوقود الطائرات أو الكحول النقي أو R113 فقط	(F)
يمكن الغسيل عند ٣٠ درجة مئوية	30 30	يحظر استخدام التنظيف الجاف	
تغسل باليد		تجفف وهي مفرودة	
تنظيف جاف فقط		يمكن تعليقها لتجف	
يمكن استخدام مادة تبييض مع الماء البارد	Cl	تجفيف الملابس وهي معلقة على حمالة	
يحظر استخدام مادة تبييض		تجفيف بالتدوير، حرارة عادية	
يمكن الكي عند ٢٠٠°م بحد أقصى		تجفيف بالتدوير، حرارة خفيفة	
يمكن الكي عند ١٥٠°م بحد أقصى		يحظر تجفيفها بالتدوير	

حماية البيئة

- هذا الجهاز مصنوع من مواد قابلة لإعادة التدوير. إذا قررت التخلص من هذا الجهاز، يرجى مراعاة القوانين المحلية الخاصة بالتخلص من النفايات. اقطع سلك التيار بحيث لا يمكن توصيل الجهاز بمصدر التيار الكهربائي. قم بإزالة الباب لمنع تعرض الحيوانات أو الأطفال الصغار للاحتباس داخل الجهاز.
- لا تضع مسحوق غسيل أكثر من الكمية المبينة في إرشادات الشركة المصنعة لمسحوق الغسيل.
- استخدم مواد إزالة البقع ومواد التبييض قبل دورة الغسيل عند الحاجة فقط.
- وفّر الماء والكهرباء من خلال إجراء الغسيل على حمولات كاملة (تختلف الكمية وفقاً للبرنامج المستخدم).

إعلان التوافق

يتوافق هذا الجهاز مع مقاييس السلامة الأوروبية EC directive 93/68 و EN Standard 60335.

WF8804LP-02990C_AR□.indd 36 2011/5/28 22:00:56

المواصفات

النوع		غسالة بفتحة أمامية لتحميل الغسيل					
الأبعاد		WF8804DP/WF8804CP/WF8804LP WF8802DP/WF8802CP/WF8802LP WF8800DP/WF8800CP/WF8800LP			WF8704DP/WF8704CP/WF8704LP WF8702DP/WF8702CP/WF8702LP WF8700DP/WF8700CP/WF8700LP		
		العرض ٥٩٨ م × العمق ٦٠٠ م × الارتفاع ٨٤٤ م			العرض ٥٩٨ م × العمق ٦٠٠ م × الارتفاع ٨٤٤ م		
ضغط الماء		٥٠ كيلوباسكال ~ ٨٠٠ كيلوباسكال					
كمية الماء		٦٤ لتر			٥٦ لتر		
الوزن الصافي		WF8804DP/ WF8800DP/ WF8800CP	WF8804CP/ WF8802CP/ WF8802DP	WF8804LP/ WF8802LP/ WF8800LP	WF8704DP/ WF8702DP/ WF8700DP	WF8704CP/ WF8702CP/ WF8700CP	WF8704LP/ WF8702LP/ WF8700LP
		٧٤ كجم	٧٠ كجم	١٨ كجم	١٩ كجم	١٩ كجم	١٧ كجم
سعة الغسيل والتجفيف		٨,٠ كجم			٧,٠ كجم		
استهلاك الطاقة	الطراز	WF8804DP/WF8804CP/WF8804LP WF8802DP/WF8802CP/WF8802LP WF8800DP/WF8800CP/WF8800LP			WF8704DP/WF8704CP/WF8704LP WF8702DP/WF8702CP/WF8702LP WF8700DP/WF8700CP/WF8700LP		
	الغسيل	٢٢٠ فولت	١٥٠ وات		٢٢٠ فولت	١٥٠ وات	
		٢٤٠ فولت	١٥٠ وات		٢٤٠ فولت	١٥٠ وات	
	الغسيل والتسخين	٢٢٠ فولت	٢٠٠٠ وات		٢٢٠ فولت	٢٠٠٠ وات	
		٢٤٠ فولت	٢٤٠٠ وات		٢٤٠ فولت	٢٤٠٠ وات	
	التجفيف – الطراز	WF8804DP/ WF8804CP/ WF8804LP	WF8802DP/ WF8802CP/ WF8802LP	WF8800DP/ WF8800CP/ WF8800LP	WF8704DP/ WF8704CP/ WF8704LP	WF8702DP/ WF8702CP/ WF8702LP	WF8700DP/ WF8700CP/ WF8700LP
	التجفيف – ٢٣٠ فولت	٦٠٠ وات	٥٥٠ وات	٥٠٠ وات	٦٠٠ وات	٥٥٠ وات	٥٠٠ وات
	الضخ	٣٤ وات					
وزن العبوة	الطراز	WF8804DP/WF8804CP/WF8804LP WF8802DP/WF8802CP/WF8802LP WF8800DP/WF8800CP/WF8800LP			WF8704DP/WF8704CP/WF8704LP WF8702DP/WF8702CP/WF8702LP WF8700DP/WF8700CP/WF8700LP		
	غلاف ورقي	٢,٢ كجم			٢,٢ كجم		
	غلاف بلاستيكي	١,٢ كجم			١,٢ كجم		
دورات التجفيف	الطراز	WF8804DP/WF8704DP WF8804CP/WF8704CP WF8804LP/WF8704LP			WF8802DP/WF8702DP WF8802CP/WF8702CP WF8802LP/WF8702LP		WF8800DP/WF8700DP WF8800CP/WF8700CP WF8800LP/WF8700LP
	لفة في الدقيقة	١٤٠٠			١٢٠٠		١٠٠٠

قد يتعرض شكل المنتج ومواصفاته للتغيير دون إخطار مسبق لأغراض تحسين المنتج.

WF8804LP-02990C_AR□.indd 37 2011/5/28 22:00:56

مذكرة

مذكـرة

هل لديك أسئلة أو تعليقات؟

البلد	اتصل بـ	أو قم بزيارة موقعنا على الإنترنت على
U.A.E	800-SAMSUNG (726-7864)	www.samsung.com

كود رقم. DC68-02990C_AR